

No.	Spare Part Code	Description of Spare Part	Qty
1	2208200119	Door hinge screw cover	1
2	2208100361	Upper door hinge cover, right	1
3	2301400035	Upper door hinge	1
4	2501100002	Door switch	1
6	2301400036	Middle door hinge	1
7	2208510073	Upper door right aid closer	1
8	2500800647	Thermostat controller	1
8.1	3050400025	LED light	1
8.2	2207100111	Ceiling lamp holder	1
8.3	2208101938	Ceiling lamp cover	1
8.5	2500300197	Display panel	1
9	2106100446	Fridge shelf assembly	2
10	2106120408	Cover of crisper drawer	1
11	2207402306	Crisper drawer assembly	1
15	2207501418	Upper balcony	2
16	2207501419	Lower balcony	1
17	2100281261	BFF230IX Fridge Door	1
17.1	2200200407	BFF230IX Fridge Door Seal	1
18	2100282001	BFF230IX Freezer Door	1
18.1	2200200405	BFF230IX Freezer Door Gasket	1
17	2100280977	BFF230WH Fridge Door	1
17.1	2200200408	BFF230WH Fridge Door Seal	1
18	2100281519	BFF230WH Freezer Door	1
18.1	2200200406	BFF230WH Freezer Door Gasket	1
21	2207300103	Upper drawer	2
22	2207300104	Lower drawer	1
23	2301400034	Lower door hinge	1
24	20122990727	Higher leveling foot	1
25	20122990781	higher foot	1
26	2107120023	Freeze air duct	1
26.1	2501000042	Fan motor	1
27	2208510007	Upper door left aid closer	1
28	2305700129	Water balcony of heater	1
37	2207700024	Drain pipe	1
39	2208102029	Decorative cover of fridge air duct	1
40	2107121293	Fridge air duct assembly	1
40.1	2501100094	Temperature sensor	1
40.2	2208100364	Refrigeration air duct cover plate	1
40.3	2701000106	Refrigerated duct foam	1
40.8	2800100019	Manual damper sealing sponge	1
40.9	2800100020	Thick sponge at air inlet	1
41	2208100428	Cover of control board	1
42	2500300680	Electric control board	1
43	2208100396	Upper door hinge cover, left	1
45	3059900038	Temperature sensor	1
47	2500700034	Defrost heater	1
48	2208510036	Lower door right aid closer	1
49	2208510037	Lower door left aid closer	1
300	2700500462	Trademark	1
301	2700127867	Carton	1

