

# TOSHIBA



 
 
 
49UL3063DB

## QUICK START GUIDE

Please visit [www.toshiba-tv.com](http://www.toshiba-tv.com) to download the full user manual.




## 1 Building and fitting stand

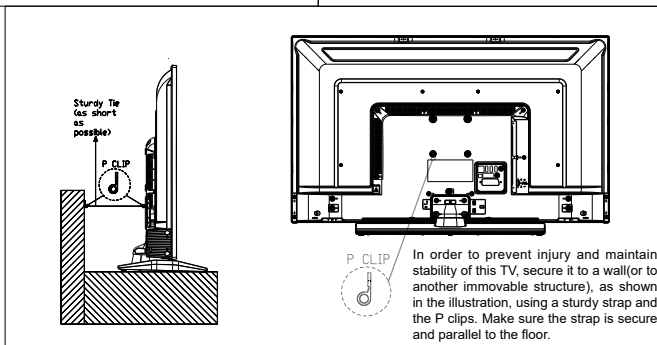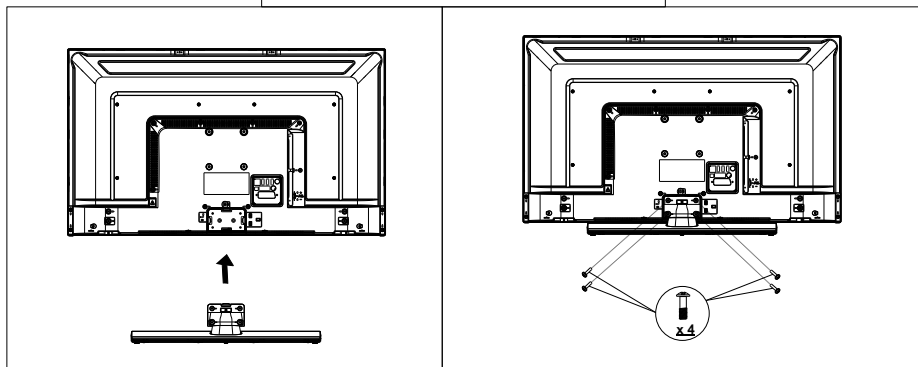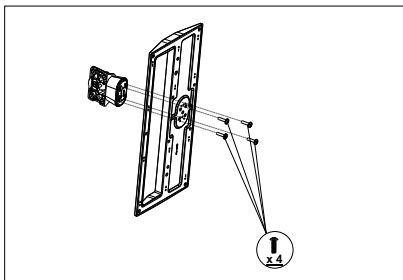

## 2 Inserting the batteries into the remote

 
Remove the back cover to reveal the battery compartment. Insert two size **AAA** batteries. Make sure the (+) and (-) signs match (observe correct polarity). Do not mix old and new batteries. Replace only with same or equivalent type. Place the cover back on. A message will be displayed on the screen when the batteries are low and must be replaced.

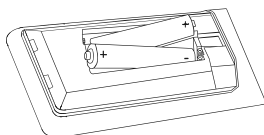

### 3 Connections

#### Antenna

 Connect the antenna cable/s to your TV.

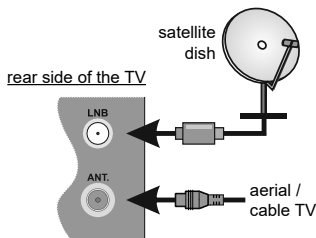

#### External Devices



PLEASE ENSURE BOTH UNITS ARE SWITCHED OFF BEFORE CONNECTING

Use the proper cable to connect two units together.

To select the desired input source, press the **Source** button on the remote control. Or press the control button to display the function options menu and then press the button consecutively to move the focus to **Source** option. Press and hold the button for about 2 seconds to activate this option. The icon colour of the option changes when activated. Then press the button once again to display the **Sources list**. Scroll through the available sources by pressing the button.

#### HDMI connection

 


#### Power

After unpacking, allow the TV set to reach the ambient room temperature before you connect the set to the mains. Plug the power cable to the mains socket outlet.

Plug the power cable to the mains socket whilst in 'off' position, and then turn the mains socket on.


**IMPORTANT:** The TV set is designed to operate on a **220-240V AC, 50 Hz** supply.

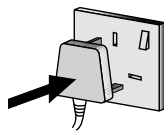

### 4 Switching on the TV

In order to turn the TV on from standby mode:

 
- Press the **Standby** button, a numeric button or **Programme +/-** button on the remote control
- Press the control button on the TV

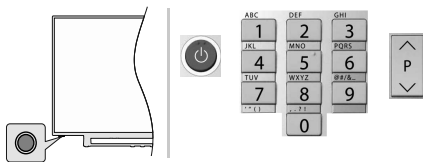


### 5 Internet connection

You can set up your TV so that it can access the Internet through your local area network (LAN) using a wired or wireless connection.
 
#### Wired

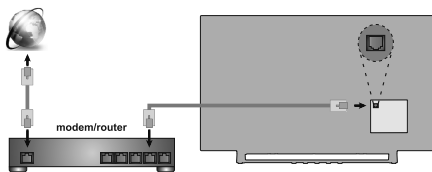


#### Wireless

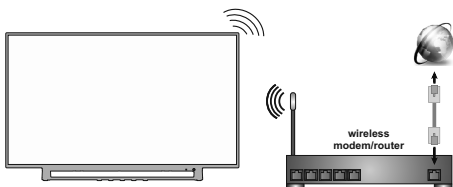 

**Note:** The figures are for representation only

## 6 Remote control

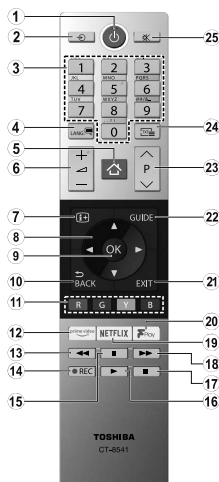 


- |                        |                   |
|------------------------|-------------------|
| 1. Standby             | 14. Record        |
| 2. Source              | 15. Pause         |
| 3. Numeric buttons     | 16. Play          |
| 4. Language            | 17. Stop          |
| 5. Menu                | 18. Fast Forward  |
| 6. Volume +/-          | 19. Netflx        |
| 7. Info                | 20. Freeview Play |
| 8. Directional buttons | 21. Exit          |
| 9. OK                  | 22. Guide         |
| 10. Back/Return        | 23. Programme +/- |
| 11. Coloured Buttons   | 24. Text          |
| 12. Prime Video        | 25. Mute          |
| 13. Rewind             |                   |

## 7 First time installation

When turned on for the first time, the TV's welcome screen will be displayed. Select your language and press **OK**. Follow the on screen instructions to set your TV and install channels. The installation wizard will guide you through the setup process. You can perform **First Time Installation** anytime using the related option in the **Settings>Installation** menu.

## 8 Accessing E-Manual and the full user manual

You can find instructions for your TV's features in the E-Manual. To use E-Manual, enter **Settings** menu, select **Manuals** and press **OK**. For quick access to E-Manual press **Menu**  button and then **Info**  button.

You can also review your TV user manual online or download as you like. Scan this QR code or visit <https://toshiba-tv.com>



If you like to register your Toshiba TV, please visit the Toshiba support website as per link above and select "Register".

## Accessories Included

- Remote Control
- Batteries: 2 x AAA
- Quick Start Guide
- P-clip x2
- Stand x1
- Screw x8

## Feature Overview

### Media Browser

Browse the media content stored on USB devices that are connected to your TV

### Common Interface

Decode encrypted digital TV channels with a Conditional Access Module(CAM) and a card provided by a digital TV service operator

### USB Recording

Record your favourite TV programmes

### Electronic Programme Guide

Display the scheduled digital TV programmes

### CEC

Control basic functions of the connected HDMI-CEC compatible audio/video devices with the remote control of the TV

### Audio Video Sharing

Access your media files stored on media server devices, such as PC's or handheld devices, that are connected to your home network

### HbbTV

Access to HbbTV services (services are dependant on broadcast)

### Apps

Access the applications installed on your TV, add more from the market

### Open Browser

Browse the internet from the comfort of your sofa

### Wireless Display

Wirelessly stream video and sound content and use your TV as a second screen for your compatible PC or handheld device

### Smart Center

Use the **Smart Center** application installed on your mobile device to launch your applications, control your TV, share media files and stream TV programmes

### Virtual Remote

Control your TV via a wireless handheld device

### Bluetooth®

Connect audio devices or remote controllers wirelessly to your TV.

## High Dynamic Range (HDR) / Hybrid Log-Gamma (HLG)

Using this feature the TV can reproduce greater dynamic range of luminosity by capturing and then combining several different exposures. HDR/HLG promises better picture quality thanks to brighter, more realistic highlights, more realistic colour and other improvements. It delivers the look that filmmakers intended to achieve, showing the hidden areas of dark shadows and sunlight with full clarity, colour and detail. HDR/HLG contents are supported via native and market applications, HDMI, USB inputs and over DVB-S broadcasts. Set the related HDMI source input as **Enhanced** from the **Sources** option in the **Settings>System** menu in order to watch HDR/HLG content, if the HDR/HLG content is received through an HDMI input. The source device should also be at least HDMI 2.0a compatible in this case.

 
## Dolby Vision

Dolby Vision™ delivers a dramatic visual experience, astonishing brightness, exceptional contrast, and vivid colour, that brings entertainment to life. It achieves this stunning image quality by combining HDR and wide colour gamut imaging technologies. By increasing the brightness of the original signal and using a higher dynamic colour and contrast range, Dolby Vision presents amazing true-to-life images with stunning detail that other post-processing technologies in the TV aren't able to produce. Dolby Vision is supported via native and market applications, HDMI and USB inputs. Set the related HDMI source input as **Enhanced** from the **Sources** option in the **Settings>System** menu in order to watch Dolby Vision content, if the Dolby Vision content is received through an HDMI input. The source device should also be at least HDMI 2.0a compatible in this case. In the **Settings>Picture>Mode** menu two predefined picture modes will be available if Dolby Vision content is detected: **Dolby Vision Bright** and **Dolby Vision Dark**. Both allow the user to experience the content in the way the creator originally intended with different ambient lighting conditions.

Some features may not be available, dependant on your TV model. Please check the product fiche for the product specifications relating to your model.

For more detailed information and videos on installation, function and features of your TV, refer to the full manual on our website:  
<https://toshiba-tv.com/uk-uk/support>

## Safety Information

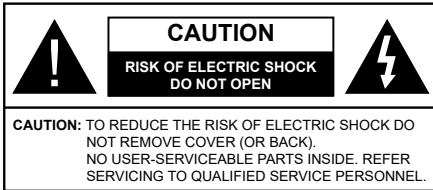

In extreme weather (storms, lightning) and long inactivity periods (going on holiday) disconnect the TV set from the mains.

The mains plug is used to disconnect TV set from the mains and therefore it must remain readily operable. If the TV set is not disconnected electrically from the mains, the device will still draw power for all situations even if the TV is in standby mode or switched off.

**Note:** Follow the on screen instructions for operating the related features.

### IMPORTANT - Please read these instructions fully before installing or operating

**WARNING:** This device is intended to be used by persons (including children) who are capable / experienced of operating such a device unsupervised, unless they have been given supervision or instruction concerning the use of the device by a person responsible for their safety.

- Use this TV set at an altitude of less than 2000 metres above the sea level, in dry locations and in regions with moderate or tropical climates.
- The TV set is intended for household and similar general use but may also be used in public places.
- For ventilation purposes, leave at least 5cm of free space around the TV.
- The ventilation should not be impeded by covering or blocking the ventilation openings with items, such as newspapers, table-cloths, curtains, etc.
- The power cord/plug should be easily accessible. **Do not** place the TV, furniture, etc. on the power cord. A damaged power cord/plug can cause fire or give you an electric shock. Handle the power cord by the plug, **do not** unplug the TV by pulling the power cord. Never touch the power cord/plug with wet hands as this could cause a short circuit or electric shock. Never make a knot in the power cord or tie it with other cords. When damaged it must be replaced, this should only be done by qualified personnel.
- Do not expose the TV to dripping or splashing of liquids and do not place objects filled with liquids, such as vases, cups, etc. on or over the TV (e.g. on shelves above the unit).
- Do not expose the TV to direct sunlight or do not place open flames such as lit candles on the top of or near the TV.



- Do not place any heat sources such as electric heaters, radiators, etc. near the TV set.
- Do not place the TV on the floor and inclined surfaces.
- To avoid danger of suffocation, keep plastic bags out of the reach of babies, children and domestic animals.
- Carefully attach the stand to the TV. If the stand is provided with screws, tighten the screws firmly to prevent the TV from tilting. Do not over-tighten the screws and mount the stand rubbers properly.
- Do not dispose of the batteries in fire or with hazardous or flammable materials.

### WARNING

- Batteries must not be exposed to excessive heat such as sunshine, fire or the like.
- Excessive sound pressure from earphones or headphones can cause hearing loss.

**ABOVE ALL - NEVER let anyone, especially children, push or hit the screen, push anything into holes, slots or any other openings in the case.**

|                        |                                 |
|------------------------|---------------------------------|
| Caution                | Serious injury or death risk    |
| Risk of electric shock | Dangerous voltage risk          |
| Maintenance            | Important maintenance component |

### Markings on the Product

The following symbols are used **on the product** as a marker for restrictions and precautions and safety instructions. Each explanation shall be considered where the product bears related marking only. Note such information for security reasons.



**Class II Equipment:** This appliance is designed in such a way that it does not require a safety connection to electrical earth.



**Hazardous Live Terminal:** The marked terminal(s) is/are hazardous live under normal operating conditions.



**Caution, See Operating Instructions:** The marked area(s) contain(s) user replaceable coin or button cell batteries.



**Class 1 Laser Product:** This product contains Class 1 laser source that is safe under reasonably foreseeable conditions of operation.

## WARNING

Do not ingest the battery, Chemical Burn Hazard This product or the accessories supplied with the product may contain a coin/button cell battery. If the coin/button cell battery is swallowed, it can cause severe internal burns in just 2 hours and can lead to death. Keep new and used batteries away from children. If the battery compartment does not close securely, stop using the product and keep it away from children.

If you think batteries might have been swallowed or placed inside any part of the body, seek immediate medical attention.

-----

A television may fall, causing serious personal injury or death. Many injuries, particularly to children, can be avoided by taking simple precautions such as:

- ALWAYS use cabinets or stands or mounting methods recommended by the manufacturer of the television set.
- ALWAYS use furniture that can safely support the television set.
- ALWAYS ensure the television set is not overhanging the edge of the supporting furniture.
- ALWAYS educate children about the dangers of climbing on furniture to reach the television set or its controls.
- ALWAYS route cords and cables connected to your television so they cannot be tripped over, pulled or grabbed.
- NEVER place a television set in an unstable location.
- NEVER place the television set on tall furniture (for example, cupboards or bookcases) without anchoring both the furniture and the television set to a suitable support.
- NEVER place the television set on cloth or other materials that may be located between the television set and supporting furniture.
- NEVER place items that might tempt children to climb, such as toys and remote controls, on the top of the television or furniture on which the television is placed.
- The equipment is only suitable for mounting at heights  $\leq 2$  m.

If the existing television set is going to be retained and relocated, the same considerations as above should be applied.

-----

Apparatus connected to the protective earthing of the building installation through the MAINS connection or through other apparatus with a connection to protective earthing – and to a television distribution system using coaxial cable, may in some circumstances create a fire hazard. Connection to a television distribution system has therefore to be provided through a device providing electrical isolation below a certain frequency range (galvanic isolator).

Using the special functions to change the size of the displayed image (i.e. changing the height/width ratio) for the purposes of public display or commercial gain may infringe on copyright laws.

The LCD display panels are manufactured using an extremely high level of precision technology; however, sometimes some parts of the screen may be missing picture elements or have luminous spots. This is not a sign of a malfunction.

The set should be operated only from a 220-240 V AC 50 Hz outlet. Ensure that the television is not standing on the mains lead. Do not cut off the mains plug from this equipment, this incorporates a special Radio Interference Filter, the removal of which will impair its performance. It should only be replaced by a correctly rated and approved type. IF IN DOUBT PLEASE CONSULT A COMPETENT ELECTRICIAN.

## WALL MOUNTING WARNINGS

- Read the instructions before mounting your TV on the wall.
- The wall mount kit is optional. You can obtain from your local dealer, if not supplied with your TV.
- Do not install the TV on a ceiling or on an inclined wall.
- Use the specified wall mounting screws and other accessories.
- Tighten the wall mounting screws firmly to prevent the TV from fall. Do not over-tighten the screws.

Figures and illustrations in this user manual are provided for reference only and may differ from the actual product appearance. Product design and specifications may be changed without notice.

## Licences

The terms HDMI, HDMI High-Definition Multimedia Interface, and the HDMI Logo are trademarks or registered trademarks of HDMI Licensing Administrator, Inc.



Manufactured under licence from Dolby Laboratories. Dolby, Dolby Audio, Dolby Vision, and the double-D symbol are trademarks of Dolby Laboratories. Confidential unpublished works. Copyright ©1992-2019 Dolby Laboratories. All rights reserved.

YouTube and the YouTube logo are trademarks of Google Inc.

For DTS patents, see <http://patents.dts.com>. Manufactured under licence from DTS Licensing Limited. DTS, the Symbol, & DTS and the Symbol together are registered trademarks, and DTS TruSurround is a trademark of DTS, Inc.® DTS, Inc. All Rights Reserved.



For DTS patents, see <http://patents.dts.com>. Manufactured under licence from DTS Licensing Limited. DTS, DTS-HD, the Symbol, & DTS or DTS-HD and the Symbol together are registered trademarks of DTS, Inc.® DTS, Inc. All Rights Reserved.



The *Bluetooth*® word mark and logos are registered trademarks owned by the Bluetooth SIG, Inc. and any use of such marks by Vestel Elektronik Sanayi ve Ticaret A.S. is under licence. Other trademarks and trade names are those of their respective owners.

DVB is a registered trademark of the DVB Project.

[1] EIA/CEA-861-D compliance covers the transmission of uncompressed digital video with high-bandwidth digital content protection, which is being standardized for reception of high-definition video signals. Because this is an evolving technology, it is possible that some devices may not operate properly with the television.

This product contains technology subject to certain intellectual property rights of Microsoft. Use or distribution of this technology outside of this product is prohibited without the appropriate licence(s) from Microsoft.

Content owners use Microsoft PlayReady™ content access technology to protect their intellectual property, including copyrighted content. This device uses PlayReady technology to access PlayReady-

protected content and/or WMDRM-protected content. If the device fails to properly enforce restrictions on content usage, content owners may require Microsoft to revoke the device's ability to consume PlayReady-protected content. Revocation should not affect unprotected content or content protected by other content access technologies. Content owners may require you to upgrade PlayReady to access their content. If you decline an upgrade, you will not be able to access content that requires the upgrade.

The "CI Plus" Logo is a trademark of CI Plus LLP.

This product is protected by certain intellectual property rights of Microsoft Corporation. Use or distribution of such technology outside of this product is prohibited without a licence from Microsoft or an authorized Microsoft subsidiary.

## Wireless LAN Transmitter Specifications

| Frequency Ranges                | Max Output Power |
|---------------------------------|------------------|
| 2400 - 2483,5 MHz (CH1-CH13)    | < 100 mW         |
| 5150 - 5250 MHz (CH36 - CH48)   | < 200 mW         |
| 5250 - 5350 MHz (CH52 - CH64)   | < 200 mW         |
| 5470 - 5725 MHz (CH100 - CH140) | < 200 mW         |

## Country Restrictions

This device is intended for home and office use in all EU countries (and other countries following the relevant EU directive) without any limitation except for the countries mentioned below.

| Country            | Restriction   |
|--------------------|---|
| Bulgaria           | General authorization required for outdoor use and public service   |
| Italy              | If used outside of own premises, general authorization is required  |
| Greece             | In-door use only for 5470 MHz to 5725 MHz band  |
| Luxembourg         | General authorization required for network and service supply(not for spectrum)                                   |
| Norway             | Radio transmission is prohibited for the geographical area within a radius of 20 km from the centre of Ny-Ålesund |
| Russian Federation | In-door use only  |
| Israel             | 5 GHz band only for 5180 MHz-5320 MHz range   |

The requirements for any country may change at any time. It's recommended that user checks with local authorities for the current status of their national regulations for 5 GHz wireless LAN's.

## Specification

|   |  |
|---|--|
| <b>TV Broadcasting</b>                              | PAL BG//DK<br>SECAM BG/DK  |
| <b>Receiving Channels</b>                           | VHF (BAND I/III) - UHF<br>(BAND U) - HYPERBAND   |
| <b>Digital Reception</b>                            | Fully integrated digital<br>terrestrial-cable-satellite<br>TV(DVB-T-C-S)<br>(DVB-T2, DVB-S2 compliant) |
| <b>Number of Preset Channels</b>                    | 11000  |
| <b>Channel Indicator</b>                            | On Screen Display  |
| <b>RF Aerial Input</b>                              | 75 Ohm (unbalanced)  |
| <b>Operating Voltage</b>                            | 220-240V AC, 50Hz.   |
| <b>Audio</b>  | DTS TruSurround<br>DTS-HD  |
| <b>Audio Output Power (WRMS.) (10% THD)</b>         | 2 x 10   |
| <b>Power Consumption (W)</b>                        | 130 W  |
| <b>Networked Standby Power Consumption (W)</b>      | < 2  |
| <b>Weight (Kg)</b>                                  | 12   |
| <b>TV Dimensions DxLxH (with foot) (mm)</b>         | 249 x 1106 x 673   |
| <b>TV Dimensions DxLxH (without foot) (mm)</b>      | 81 x 1106 x 641  |
| <b>Display</b>                                      | 16:9 49"   |
| <b>Operation temperature and operation humidity</b> | 0°C up to 40°C, 85%<br>humidity max  |

### Disposal...

The following information is only for EU-member states:

#### Disposal of products

The crossed out wheeled dust bin symbol indicates that products must be collected and disposed of separately from household waste. Integrated batteries and accumulators can be disposed of with the product. They will be separated at the recycling centres.



The black bar indicates that the product was placed on the market after August 13, 2005.

By participating in separate collection of products and batteries, you will help to assure the proper disposal of products and batteries and thus help to prevent potential negative consequences for the environment and human health.

For more detailed information about the collection and recycling programmes available in your country, please contact your local city office or the shop where you purchased the product.

#### Disposal of batteries and/or accumulators

The crossed out wheeled dust bin symbol indicates that batteries and/or accumulators must be collected and disposed of separately from household waste.



If the battery or accumulator contains more than the specified values of lead (Pb), mercury (Hg), and/or cadmium (Cd) defined in the European Battery Directive, then the chemical symbols for lead (Pb), mercury (Hg) and/or cadmium (Cd) will appear below the crossed out wheeled dust bin symbol.

By participating in separate collection of batteries, you will help to assure the proper disposal of products and batteries and thus help to prevent potential negative consequences for the environment and human health. For more detailed information about the collection and recycling programmes available in your country, please contact your local city office or the shop where you purchased the product.

### REACH information

The European Union (EU) chemical regulation, REACH (Registration, Evaluation, Authorization and Restriction of Chemicals), entered into force on 1 June 2007.

Toshiba will meet all REACH requirements and is committed to provide our customers with information about the presence in our articles of substances included on the candidate list according to REACH regulation.

Please consult the following website [www.toshiba-tv.com](http://www.toshiba-tv.com) for information about the presence in our articles of substances included on the candidate list according to REACH in a concentration above 0.1 % weight by weight.

EU Conformity Statement



This product is carrying the CE-Mark in accordance with the related European Directives.

Responsible for CE-Marking is Vestel UK, Langley, Berkshire, SL3 6EZ.

This product is labeled with the CE Mark in accordance with the related European Directives, notably RoHS Directive 2011/65/EU. Furthermore the product complies with the Ecodesign Directive 2005/32/EC (EuP) and 2009/125/EC (ErP) and its related implementing measures.

This equipment corresponds to requirements of the Technical Regulation on limitation of usage of certain dangerous substances in electrical and electronic equipment.

Find out all you need to know about the latest, trend-setting TV technology on our website.

**[www.toshiba-tv.com](http://www.toshiba-tv.com)**

 
You can download the full manual, watch support videos, learn latest FAQs, stick your head into the forum, or register your TV in the support section.

Hereby, VESTEL Elektronik Sanayi ve Ticaret A.Ş., declares that the radio equipment type TV is in compliance with Directive 2014/53/EU. The full text of the EU declaration of conformity is available at the following internet address: [doc.vosshub.com](http://doc.vosshub.com)

| Product Fiche                                     |            |        |
|---|------------|--------|
| Commercial Brand: TOSHIBA                         |            |        |
| Model No.   | 49UL3063DB |        |
| Energy efficiency class                           | A+         |        |
| Visible screen size (diagonal, approx.) (inch/cm) | 49 inches  | 123 cm |
| On mode average power consumption (Watt)          | 69.0 W     |        |
| Annual energy consumption (kWh/annum)(*)          | 100.0 kWh  |        |
| Standby power consumption (Watt)                  | 0.50 W     |        |
| Off mode power consumption (Watt)                 | N/A        |        |
| Display resolution (px)                           | 3840x2160  |        |

(\*)Energy consumption kWh per year, based on the power consumption of the television operating 4 hours per day for 365 days. The actual energy consumption will depend on how the television is used.

| A VESA WALL MOUNT MEASUREMENTS |                         |                              |
|--------------------------------|-------------------------|------------------------------|
| B                              | Hole Pattern Sizes (mm) | W H                          |
|                                |                         | 200 200                      |
| C                              | Screw Sizes             |                              |
| D                              | Length (X)              | min. (mm) 10<br>max. (mm) 13 |
| E                              | Thread (Y)              | M6                           |

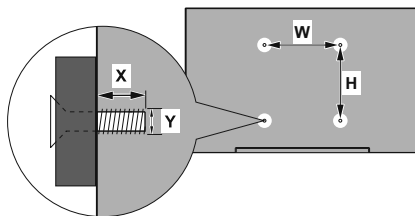

|             | A   | B   | C                    | D               | E                  |
|-------------|---|---|----------------------|-----------------|--------------------|
| English     | VESA WALL MOUNT MEASUREMENTS                  | Hole Pattern Sizes (mm)                         | Screw Sizes          | Length (X)      | Thread (Y)         |
| Deutsch     | MASSANGABEN FÜR VESA-WANDMONTAGE              | Lochmustergrößen (mm)                           | Schraubengrößen      | Länge (X)       | Gewinde (Y)        |
| Français    | DIMENSIONS DU SUPPORT DE FIXATION MURALE VESA | Dimensions des modèles de trous de montage (mm) | Dimensions des vis   | Longueur (X)    | Filetage (Y)       |
| Italiano    | Misurazioni installazione a parete VESA       | Dimensioni schema foro (mm)                     | Dimensioni vite      | Lunghezza (X)   | Filettatura (Y)    |
| Português   | MEDIÇÕES DE MONTAGEM MURAL VESA               | Dimensões do molde de furação (mm)              | Tamanhos do parafuso | Comprimento (X) | Rosca (Y)          |
| Español     | MEDIDAS DEL MONTAJE DE PARED VESA             | Tamaños de patrón para agujero (mm)             | Tamaños de tornillo  | Longitud (X)    | Rosca (Y)          |
| Türkçe      | VESA DUVAR MONTAJ ARAÇLARI ÖLÇÜLERİ           | Aplakac Delik Ölçüleri (mm)                     | Vida Ölçüleri        | Uzunluk (X)     | Yüzey (Y)          |
| Български   | РАЗМЕРИ НА НАСТЕННАТА МАЛОВАНАНА ВЕСА         | Мярки за дупките, отвори (mm)                   | Мярки за винтовете   | Дължина (X)     | Затягащият (Y)     |
| Polški      | WYMIARY DO MONTAŻU NAŚCIENNEGO VESA           | Rozmiary szablonu otworów (mm)                  | Rozmiary wkrętów     | Długość (X)     | Gwint (Y)          |
| Čeština     | ROZMĚRY DRŽÁKA NA ZĚD VESA                    | Rozměry velikosti děr (mm)                      | Rozměry šroubů       | Délka (X)       | Závit (Y)          |
| Magyar      | VESA FALI TARTÓ MÉRTEK                        | Lyukak méretének nagyságát (mm)                 | Csavar méret         | Hossz (X)       | Menet (Y)          |
| Română      | MĂSURĂTORI SUPORT PERETE VESA                 | Dimensiuni tipar gaură (mm)                     | Dimensiuni suruburi  | lungime (X)     | filet (Y)          |
| Svenska     | VESA VÄGGMONTERINGSMÅTT                       | Hålmonsterstorlek (mm)                          | Skruvstorlekar       | Längd (X)       | Tråd (Y)           |
| Nederlands  | VESA WANDMONTAGE METINGEN                     | Grootte booropening (mm)                        | Schroefgrootte       | Lengte (X)      | Draad (Y)          |
| Suomi       | VESA-SEINÄASENNUKSEN MITAT                    | Reikäkuivon koot (mm)                           | Ruuvinkoot           | Pituus (x)      | Kierre (Y)         |
| Norsk       | VESA VEGGMONTERINGSMÅL                        | Hullmønster størrelser (mm)                     | Skruestørrelser      | Lengde (x)      | Tråd (Y)           |
| Dansk       | VESA VÆGGMONTERINGS-MÅL                       | Hullmønster-størrelser (mm)                     | Skruestørrelser      | Længde(X)       | Tråd (Y)           |
| Русский     | РАЗМЕРЫ НАСТЕННОГО КРЕПЛЕНИЯ VESA             | Размеры системы отверстий                       | Размеры винтов       | Длина(X)        | Резьба(Y)          |
| Беларуская  | ПАМЯРЫ НАСТЕННАГА МАЛОВАНАНА VESA             | Памеры сістэмы адртулін                         | Памеры вінтоў        | Давжыня(X)      | Рэзьба(Y)          |
| македонски  | МЕРКИ ЗА МОНТАЖ НА СТЕНА ЗА "VESA"            | Шема на големине на дупките (mm)                | Големина на шрафов   | Должина (X)     | Насток (Y)         |
| українська  | РОЗМІРИ НАСТІННОГО КРИПЛЕННЯ VESA             | Відстані між кріпильними отворами, мм           | Розміри гвинтів      | Довжина (X)     | Діаметр різьби (Y) |
| Srpski      | DIMENZJE VESA ZIDNOG NOSACA                   | Dimenzije šablona za bušenje                    | Dimenzije zavrtanje  | Dužina (X)      | Navoj (Y)          |
| Slovenčina  | ROZMĚRY DRŽÁKA NA STĚNU VESA                  | Rozměry velikosti díř (mm)                      | Rozměry šroubků      | DĚlka (X)       | Závřt (Y)          |
| Slovenščina | MERE STENKEGA NOSILCA VESA                    | Velikosti vzorca luknje (mm)                    | Velikosti vijakov    | Dolžina (X)     | Navoj (Y)          |
| Hrvatski    | VESA MJERE ZIDNOG DRŽAKA                      | Većicine uzorka otvora (mm)                     | Većicine vijaka      | Dužina (X)      | Navoj (Y)          |
| Bosanski    | DIMENZJE VESA ZIDNOG NOSACA                   | Dimenzije šablona za bušenje                    | Dimenzije vijaka     | Dužina (X)      | Navoj (Y)          |
| Български   | РАЗМЕРИ ЗА КОМПЛЕКТ ЗА МОНТАЖ НА СТЕНА VESA   | Размери на отвора (mm)                          | Размер на болта      | Дължина(X)      | Резба(Y)           |
| Lietuviu    | VESA TVRITINIMO PRIE SIENOS MATAVIMAI         | Angos šablono dydis (mm)                        | Varžtų dydis         | Ilgis (X)       | Sriegis (Y)        |
| Latviešu    | VESA SIENAS SPRĀNĀJUMA IZMĒRI                 | Caurumu šablona izmēri (mm)                     | Skrūvju izmēri       | Garums (X)      | Vītne (Y)          |
| Eesti       | VESA SEINALE KINNITAMISE MÕÖDUL               | Kruvi suuruse mõõt (mm)                         | Kruvi suurus         | Kõrgus (X)      | Kaare (Y)          |
| Shqip       | PERMASAT E NJËSIE SE MONTIMIT NE MUR VESA     | Madhësitë e modele të vrimave (mm)              | Madhësitë e vithave  | Gjatësia (X)    | Filetimi (Y)       |
| العربي      | حجميات تركيب الحائط VESA                      | أبعاد الفتحات (مم)                              | أبعاد المسمار        | الطول (X)       | النسب (Y)          |
| हिन्दी      | VESA दीवार मॉन्टिंग के लिए नसिका के माप       | दुपकटो नसिका के माप (mm)                        | दुपकटो नसिका के माप  | दीर्घता (X)     | नसिका (Y)          |
| فارسی       | اندازه گیری اتصال دیواری VESA                 | اندازه های گوی (میل، سانتی متر)                 | اندازه های پیچ       | طول (X)         | ریشه (Y)           |







**TOSHIBA**



50523451