


# WALKER

## OPERATING INSTRUCTIONS

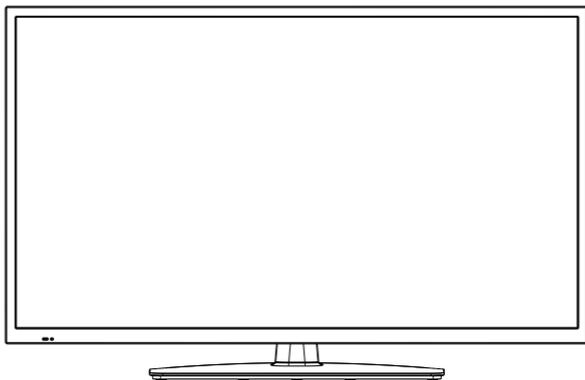

**39WPS21**

 **SAORVIEW**

APPROVED

**COLOUR TELEVISION WITH REMOTE CONTROL**

**HDMI™**  
HIGH-DEFINITION MULTIMEDIA INTERFACE

 FreeviewPlay

[www.glendimplexireland.com](http://www.glendimplexireland.com)



<b>Contents</b> .....	
Environmental Information.....	3
Accessories Included.....	4
Standby Picture.....	4
Standby Notifications.....	4
TV Control Switch & Operation.....	5
Using Main TV Menu.....	5
Inserting the Batteries into the Remote.....	6
Power Connection.....	6
Antenna Connection.....	6
Disposal Information.....	7
Remote Control.....	9
Connections.....	10
Switching On/Off.....	11
First Time Installation.....	11
Media Playback via USB Input.....	12
USB Recording.....	12
Media Browser.....	14
CEC.....	14
Quick AI.....	15
E-Manual.....	15
Using the Channel List.....	23
Configuring Parental Settings.....	23
Electronic Programme Guide.....	23
Teletext Services.....	24
Software Upgrade.....	24
Troubleshooting & Tips.....	24
PC Input Typical Display Modes.....	25
AV and HDMI Signal Compatibility.....	25
Supported DVI Resolutions.....	27
Connectivity.....	28
Apps.....	31
Freeview Play Platform.....	31
Internet Browser.....	31
HBBTV System.....	32
Smart Center.....	32
Alexa Ready.....	34
Google Assistant.....	35
DVB functionality information.....	36

## Safety Information



**CAUTION:** TO REDUCE THE RISK OF ELECTRIC SHOCK DO NOT REMOVE COVER (OR BACK). NO USER SERVICEABLE PARTS INSIDE. REFER SERVICING TO QUALIFIED SERVICE PERSONNEL.

In extreme weather (storms, lightning) and long inactivity periods (going on holiday), disconnect the TV set from the mains.

The mains plug is used to disconnect TV set from the mains and therefore it must remain readily operable. If the TV set is not disconnected electrically from the mains, the device will still draw power for all situations even if the TV is in standby mode or switched off.

*Note: Follow the on screen instructions for operating the related features.*

### IMPORTANT - Please read these instructions before installing or operating

- WARNING:** This device is intended to be used by persons (including children) who are capable / experienced of operating such a device unsupervised, unless they have been given supervision or instruction concerning the use of the device by a person responsible for their safety.
- Use this TV set at an altitude of less than 2000 meters above the sea level, in dry locations and in regions with moderate or tropical climates.
- The TV set is intended for household and similar general use but may also be used in public places.
- For ventilation purposes, leave at least 5cm of free space around the TV.
- The ventilation should not be impeded by covering or blocking the ventilation openings with items, such as newspapers, table-cloths, curtains, etc.

The power cord plug should be easily accessible. Do not place the TV, furniture, etc. on the power cord. A damaged power cord should be replaced. Do not use you an electric shock. Handle the power cord by the plug, do not unplug the TV by pulling the power cord. Never touch the power cord/plug with wet hands as this could cause a short circuit or electric shock. Never make a knot in the power cord or tie it with other cords. When damaged it must be replaced, this should only be done by qualified personnel.

- Do not expose the TV to dripping or splashing of liquids and do not place objects filled with liquids, such as vases, cups, etc. on or over the TV (e.g., on shelves above the unit).
- Do not expose the TV to direct sunlight or do not place open flames such as lit candles on the top of or near the TV.

- Do not place any heat sources such as electric heaters, radiators, etc. near the TV set.
- Do not place the TV on the floor and inclined surfaces.
- To avoid danger of suffocation, keep plastic bags out of the reach of the babies, children and domestic animals.
- Carefully attach the stand to the TV. If the stand is provided with screws, tighten the screws firmly to prevent the TV from tilting. Do not over-tighten the screws and mount the stand rubbers properly.
- Do not dispose of the batteries in fire or with hazardous or flammable materials.

**WARNING** - Batteries must not be exposed to excessive heat such as sunshine, fire or the like.  
**WARNING** - Excessive sound pressure from earphones or headphones can cause hearing loss.  
**ABOVE ALL - NEVER let anyone, especially children, push or hit the screen, push anything into holes, slots or any other openings in the case.**

	Caution	Serious injury or death risk
	Risk of electric shock	Dangerous voltage risk
	Maintenance	Important maintenance component

### Markings on the Product

The following symbols are used on the product as a marker for restrictions and precautions and safety instructions. Each explanation shall be considered where the product bears related marking only. Note such information for security reasons.

**Class II Equipment:** This appliance is designed in such a way that it does not require a safety connection to electrical earth.

**Hazardous Live Terminal:** The marked terminal(s) isolate hazardous live under normal operating conditions.



**Caution. See Operating Instructions:** The marked area(s) contain(s) user replaceable coin or button cell batteries.



**Class 1 Laser Product:** This product contains Class 1 laser source that is safe under reasonably foreseeable conditions of operation.

## WARNING

Do not ingest the battery. Chemical Burn Hazard  
Pressing on or near the eyes with the battery  
may cause serious eye injury. If the  
battery comes in contact with your eyes,  
flush with water for 15 minutes. If the  
combination cell battery is swallowed, it can cause  
severe internal burns in just 2 hours and can lead  
to death.  
Keep new and used batteries away from children.  
If the battery compartment does not close securely,  
stop using the product and keep it away from  
children.  
If you think batteries might have been swallowed or  
placed inside any part of the body, seek immediate  
medical attention.

Television may fall, causing serious personal injury  
or death. Many circumstances exist when  
falling is more likely. The following information  
can be avoided by taking simple precautions such as:  
• ALWAYS use cabinets or stands or mounting  
methods recommended by the manufacturer of  
the television set.  
• ALWAYS use furniture that can safely support the  
television set.  
• ALWAYS ensure the television set is not overhang-  
ing the edge of the supporting furniture.

- ALWAYS educate children about the dangers of  
climbing on furniture to reach the television set  
or its controls.
- ALWAYS route cords and cables connected to  
the television set so they cannot be tripped over,  
pulled or grabbed.
- NEVER place a television set in an unstable  
location.

- NEVER place the television set on tall furniture  
(for example, cupboards or bookcases) without  
anchoring both the furniture and the television set  
to a suitable support.
- NEVER place the television set on cloth or other  
materials that may be located between the televi-  
sion set and supporting furniture.
- NEVER place items that might tempt children  
to climb, such as toys and remote controls, on  
the television set, on furniture on which the  
television is placed, or on furniture on which the  
television is mounted.
- The equipment is only suitable for mounting at  
heights 52 m.

If the existing television set is going to be retained  
and relocated, the same considerations as above  
should be applied.

Apparatus connected to the protective earthing of the  
building installation through the MAINS connection or  
through other apparatus with a connection to protec-  
tive earthing – and to a television distribution system  
using coaxial cable, may in some circumstances  
cause a fire hazard. Connections to fire alarm dis-  
tributable devices should be made through a  
device providing electrical isolation below a certain  
frequency range (galvanic isolator).

## WALL MOUNTING WARNINGS

- Read the instructions before mounting your TV  
on the wall.
- The wall mount kit is optional. You can obtain from  
your local dealer, if not supplied with your TV.
- Do not install the TV on a ceiling or on an inclined  
wall.
- Use the specified wall mounting screws and other  
accessories.
- Tighten the wall mounting screws firmly to prevent  
the TV from falling. Do not over-tighten the screws.

Figures and illustrations in this user manual are  
provided for reference only and may differ from the  
actual product appearance. Product design and  
specifications may be changed without notice.

## Environmental Information

This television is designed to be environment friendly.  
To reduce energy consumption, you can follow these  
steps:

- If you set the **Energy Saving** to **Minimum**, **Medium**,  
**Maximum** or **Auto** the TV will reduce the energy  
consumption accordingly. If you like to set the  
**Backlight** to a fixed value set as **Custom** and adjust  
the **Backlight** (located under the **Energy Saving**  
setting) manually using Left or Right buttons on the  
remote. Set as **Off** to turn this setting off.

**Note:** Available **Energy Saving** options may differ depending  
on the selected **Mode** in the **SettingsPicture** menu.

The **Energy Saving** settings can be found in the **Set-  
tingsPicture** menu. Note that some picture settings  
will be unavailable to be changed.

If pressed Right button or Left button consecutively,  
"Screen will be off in 15 seconds", message will be  
displayed on the screen. Select **Process** and press  
**OK** to turn the screen off immediately. If you don't  
press any button, the screen will be off in 15 seconds.  
Press any button on the remote or on the TV to turn  
the screen on again.

**Note:** Screen **Off** option is not available if the **Mode** is set  
to **Game**.

When the TV is not in use, please switch off or  
disconnect the TV from the mains plug. This will also  
reduce energy consumption.

## Features

- Remote controlled colour TV
- Fully integrated digital terrestrial/cable/satellite TV  
(DVB-T/T2/C/S-S2)
- HDMI inputs to connect other devices with HDMI  
sockets
- USB input

- OSD menu system
- Back AV inputs for external devices (such as DVD  
Players, PVR, video games, etc.)
- Stereo sound system
- Teletext

- Headphone connection
- Automatic programming
- Manual tuning
- Automatic power down after up to eight hours
- Sleep timer
- Child lock
- Automatic sound mute when no transmission

- NTSC playback
- AVL (Automatic Volume Limiting)
- PLL (Frequency Search)
- PC input
- Game Mode (Optional)
- Picture off function
- Programme recording
- Programme timeshifting
- Ethernet (LAN) for internet connectivity and service
- 802.11 ab/g/n built in WLAN Support
- Audio Video Sharing
- HbbTV

## High Dynamic Range (HDR) / Hybrid Log-Gamma (HLG)

Using this feature the TV can reproduce greater  
dynamic range of luminosity by capturing and then  
combining several different exposures. HDR/HLG  
promises better picture quality thanks to brighter, more  
realistic highlights, more realistic colour and other  
improvements. It delivers the look that filmmakers  
intended to achieve, showing the hidden areas of  
dark shadows and sunlight with full clarity, colour and  
detail. HDR/HLG contents are supported via native  
and market applications, HDMI, USB inputs and over  
DVB-S broadcasts.

## Accessories Included

- Remote Control
- Batteries: 2 x AAA
- Instruction Book
- Quick Start Guide

## Standby Picture

You can use your TV as a digital picture frame using  
the Standby Picture feature. In order to do this follow  
the steps below.

- Set the **Standby Picture** option in the **Settings>Sys-  
tem>More** menu as **On**. This option is set as **Off**  
by default.

- Create a separate folder named as **standby\_picture**  
in the USB storage device's root directory and copy  
into it the files you want to use into that folder and then  
connect the USB storage device to your TV.

- Press the **Standby** button on the remote briefly to  
switch your TV into standby picture mode.
- Note that once the **Standby Picture** option is set as  
**On**, the function of the **Standby** button on the remote  
will change. After this you will need to press and hold  
the button to switch the TV into standby mode while  
the TV is in normal operating mode.

If there are more than 1 picture file available in the  
folder all picture files will be displayed as a slide show  
in succession. If the necessary folder is not created  
or there isn't any picture file in the folder, a warning  
message will be displayed on the screen for a few  
seconds and then disappear.

In standby picture mode the backlight level of the  
screen will be decreased by 50 % and Smart Center  
features will not be usable, if Smart Center is available  
for your TV model.

To switch your TV from standby picture mode back to  
normal operating mode press the **Standby** button on  
the remote briefly.

Beside the remote control you can also use the control  
unit on the TV to switch into standby picture mode  
and back to normal operating mode. In order to do  
that follow the same instructions as described in the  
**TV Control & Operation** section for switching the TV  
into the standby mode. Note that you will not be able  
to use the remote control to switch the TV into standby  
mode on the TV while the TV is in standby picture mode.  
**Note:** The availability of this feature depends on the TV model  
and its features.

Refer to the **Supported File Formats for USB Mode** section  
for the supported image file formats.

## Standby Notifications

If the TV does not receive any input signal (e.g. from  
an aerial or HDMI source) for 3 minutes, it will go  
into standby. When you next switch-on, the following  
message will be displayed: "TV switched to standby  
mode automatically because there was no signal  
for a long time."

The **Auto Power Down** option in the **Settings>System**  
>**More** menu could have been set to a value between  
1 and 8 hours by default. If this setting is not set as **Off**  
and the TV has been left on and not been operated  
during the set time, it will switch into standby mode  
after the set time has expired. When you next switch-on  
the TV, the following message will be displayed: "TV  
switched to stand-by mode automatically because  
no operation was made for a long time." Before the

TV switches into standby mode a dialogue window will be displayed. If you do not press the **TV** button the TV will switch into the standby mode after a waiting period of about 5 minutes. You can highlight **Yes** and press **OK** to switch the TV into standby mode immediately, if you highlight **No** and press **OK** the TV will remain on. You can also choose to cancel the **Auto Power Down** function from this dialogue. Highlight **Disable** and press **OK**, the TV will remain on and the function will be cancelled. You can enable this function again by changing the setting of the **Auto Power Down** option from the **Settings>System>More** menu.

### TV Control Switch > Operation



1. Up direction
2. Down direction
3. Volume / Info / Sources List selection and Standby-On switch

The Control button allows you to control the Volume / Programme / Source and Standby-On functions of the TV.

**To change volume:** Increase the volume by pushing the button up. Decrease the volume by pushing the button down.

**To change channel:** Press the middle of the button in, the information banner will appear on the screen. Scroll through the stored channels by pushing the button up or down.

**To change source:** Press the middle of the button in twice (for the second time in total), the source list will appear on the screen. Scroll through the available sources by pushing the button up or down.

**To turn the TV off:** Press the middle of the button in and hold it down for a few seconds, the TV will turn into standby mode.

**To turn on the TV:** Press the middle of the button in, the TV will turn on.

#### Notes:

If you turn the TV off, this cycle starts again beginning with the volume setting.  
Main menu OSD cannot be displayed via control button.

### Operation with the Remote Control

Press the **Menu** button on your remote control to display main menu. Use the directional buttons and **OK** button to navigate and set. Press **Return/Back** or **Menu** button to quit a menu screen.

#### Input Selection

Once you have connected external systems to your TV, you can switch to different input sources. Press the **Source** button on your remote control consecutively to select the different sources.

#### Changing Channels and Volume

You can change the channel and adjust the volume by using the **Programme +**, and **Volume +/-** buttons on the remote.

#### Using Main TV Menu

When the **Menu** button is pressed, the main TV menu will appear on the screen. You can navigate through the menu items using the directional buttons on the remote. To select an item or see the sub-menu options of the highlighted menu, press **OK** button. When you highlight a menu option some of the sub-menu items of this menu may appear on the upper side of the menu bar for quick access. To use a quick access item highlight it, press **OK** and set as desired using the **Left/Right** directional buttons. When finished press **OK** or **Back/Return** button to exit.

Press **Exit** button to close the main menu.

#### 1. Home

When main menu is opened **Home** menu bar will be highlighted. The content of the **Home** menu will be customised by adding options from other menus. Just highlight an option and press the **Down** direction button on the remote. If you see **Add to Home** option you can add it to the **Home** menu. Same way you can remove it. Press the **Down** direction button and **Select** **Delete** or **Move** option and press **OK**. In order to move a menu item use the **Right** and **Left** direction buttons to select the position that you want the item to move to and press **OK**.

#### 2. Search

You can search for Channels, Guide, TV menus, Applications, Web, YouTube and Videos using this option. Press **OK** and enter a key word using the virtual keyboard. Then highlight **OK** and press **OK** to start the search. Results will be displayed on the screen. Highlight the desired result using the directional buttons and press **OK** to open.

#### 3. TV

#### 3.1. Guide

You can access the electronic programme guide menu using this option. Refer to **Electronic Programme Guide** section for more information.

### 3.2. Channels

You can access the **Channels** menu using this option. Refer to **Using the Channel List** section for more information.

### 3.3. Timers

You can set timers for future events using the options of this menu. You can also review the previously created timers under this menu.

To add a new timer select the **Add Timer** tab using the **Left/Right** buttons and press **OK**. Set the sub-menu options as desired and when finished press **OK**. A new timer will be created.

To edit a previously created timer, highlight that timer, select the **Edit Selected**, **Timer** tab and press **OK**. Change the sub-menu options as desired and press **OK** to save your settings.

To cancel an already set timer, highlight that timer, select **Delete Selected** timer tab and press **OK**. A success message will be displayed. Highlight **Yes** and press **OK** to proceed. The timer will be cancelled.

It is not possible to set timers for two or more events that will broadcasted in different channels at the same time interval. In this case you will be asked to choose one of these timers and cancel it. **Options** menu will be managed. The highlighted **Save/Cancel** menu **OK** to cancel that timer. You will have to save changes after that. In order to do that press **OK**, highlight **Save** changes and press **OK** again.

### 3.4. Recordings

You can manage your recordings using the options of this menu. You can play-back, edit, delete or sort previously recorded events. Highlight a tab by using the **Left** or **Right** direction button and press **OK** to see available options.

### 3.5. QuickAI

AI stands for artificial intelligence. By means of AI feature some TV settings can be adjusted automatically depending on the genre information of the currently watched programme or depending on your preferences. Refer to the **Quick AI** section for more information.

### 3.6. More Apps

In order to manage the apps installed on your TV, you can use this option. Highlight and press **OK**. You can add an installed app to **Home** menu, launch or remove it. Highlight an app and press **OK** to see the available options.

### 3.7. Market

You can add new apps from the application market using this option. Highlight and press **OK**. Available apps will be displayed. You can also access application market from within the **More Apps** menu.

### 3.8. Reset Apps

You can reset your customisations on the **Home** menu to defaults using this option (availability depends on TV model and its features). Highlight **Reset** and press **OK**. A confirmation message will be displayed. Highlight **Yes** and press **OK** to proceed. Note that you will not be able to perform this operation again within the next few minutes.

### 3.9. Accessibility

You can access the accessibility settings menu directly using this option.

### 3.10. Privacy Settings

You can access the privacy settings menu directly using this option. This option may not be available depending on the model of your TV and the selected country during the first time installation process.

### 4. Settings

You can manage the settings of your TV using the options of this menu. Refer to **Settings Menu Content** section for more information.

### 5. Sources

You can manage your input source preferences using the options of this menu. To show the sources of the TV or use your TV as a wireless display device highlight one of the options and press **OK**.

### 5.1. Source Settings

You can access the source settings menu directly using this option. Edit the names, enable or disable selected source options.

### Inserting the Batteries into the Remote

Remove the screw that secures the battery compartment cover on the back side of the remote control first. Insert two size AAA batteries. Make sure the (+) and (-) signs match (observe correct polarity). Do not mix old and new batteries. Replace only with same or equivalent type. Place the cover back on. Then screw the cover back on again.

A message will be displayed on the screen when the batteries are low and must be replaced. Note that when the batteries are low and must be replaced, the remote control may be impaired.

Batteries should not be exposed to excessive heat such as sunlight, fire or the like.


### Power Connection

**IMPORTANT:** The TV set is designed to operate on a 220-240V AC, 50 Hz supply. After unpacking, allow the TV set to reach the ambient room temperature before you connect the set to the mains. Plug the power cable to the mains socket outlet.

### Antenna Connection

Connect the aerial or cable TV plug to the aerial input (ANT) socket or satellite plug to the satellite input (LNB) socket located on the rear side of the TV.

### Rear side of the TV

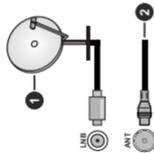

1. Satellite
2. Aerial or cable

If you want to connect a device to the TV, make sure you have read the instructions for that device before making any connection. After the connection is done, you can turn on the units and use them.

### License Notification

The terms HDMI, HDMI High-Definition Multimedia Interface, and the HDMI Logo are trademarks or registered trademarks of HDMI Licensing/Administrator, Inc.



Manufactured under license from Dolby Laboratories, Dolby, Dolby Audio, and the double-D symbol are trademarks of Dolby Laboratories Licensing Corporation.

YouTube and the YouTube logo are trademarks of Google Inc.

This product contains technology subject to certain intellectual property rights of Microsoft. Use or distribution of this technology outside of this product is prohibited without the appropriate license(s) from Microsoft.

Content owners use Microsoft PlayReady™ content access technology to protect their intellectual property, including copyrighted content. This device uses PlayReady technology to access PlayReady-protected content and/or WMDRM-protected content. If the device fails to properly enforce restrictions on content usage, content owners may require Microsoft to revoke the device's ability to consume PlayReady-protected content. Revocation should not affect unprotected content or content protected by other content access technologies. Content owners may require you to upgrade PlayReady to access their content. If you

decline an upgrade, you will not be able to access content that requires the upgrade.

The "CI Plus" Logo is a trademark of CI Plus LLP. This product is protected by certain intellectual property rights of Microsoft Corporation. Use or distribution of this technology outside of this product is prohibited without a license from Microsoft or an authorized Microsoft subsidiary.

### Disposal Information

#### [European Union]

These symbols indicate that the electrical and electronic equipment and the battery with this symbol should not be disposed of as general household waste at its end-of-life. Instead, the products should be handed over to the applicable collection points for the recycling of electrical and electronic equipment as well as batteries (properly marked) and mobile phones, in accordance with national legislation and the Directive 2012/19/EU and 2013/56/EEU.

By disposing of these products correctly, you will help to conserve natural resources and will help to prevent potential negative effects on the environment and human health which could otherwise be caused by inappropriate waste handling of these products.

For more information about collection points and recycling of these products, please contact your local municipal office, your household waste disposal service or the shop where you purchased the product. Penalties may be applicable for incorrect disposal of this waste, in accordance with national legislation.

#### [Business users]

 
If you wish to dispose of this product, please contact your supplier and check the terms and conditions of the purchase contract.

#### [Other Countries outside the European Union]

These symbols are only valid in the European Union. Contact your local authority to learn about disposal and recycling.

The product and packaging should be taken to your local collection point for recycling.

Some collection points accept products free of charge. **Note:** The sign Pb below the symbol for batteries indicates that this battery contains lead.



1. Products
2. Battery

### Wireless LAN Transmitter Specifications

Frequency Ranges	Max Output Power
2400 - 2483.5 MHz (CH1-CH13)	< 100 mW
5150 - 5250 MHz (CH38 - CH48)	< 200 mW
5250 - 5350 MHz (CH49 - CH54)	< 200 mW
5470 - 5725 MHz (CH100 - CH140)	< 200 mW

### Country Restrictions


This device is intended for home and office use in all EU countries (and other countries following the relevant EU directive) without any limitation except for the countries mentioned below.

Country	Restriction
Bulgaria	General authorization required for outdoor use and public service
Italy	If used outside of own premises, general authorization is required
Greece	In-door use only for 5470 MHz to 5725 MHz band
Luxembourg	General authorization required for network and service supply (not for spectrum)
Norway	Radio transmission is prohibited for the geographical area within a radius of 20 km from the centre of Ny-Alesund
Russian Federation	In-door use only
Israel	5 GHz band only for 5180 MHz-5320 MHz range

The requirements for any country may change at any time. It's recommended that user checks with local authorities for the current status of their national regulations for 5 GHz wireless LAN's.

### Specification

TV Broadcasting	PAL, SECAM, SECAM BGDK, VHF (BAND I/III) - UHF (BAND IV) - HYPERBAND
Receiving Channels	Fully integrated digital terrestrial-cable-satellite (DVB-T, DVB-S2 compliant)
Digital Reception	
Number of Preset Channels	11 000
Channel Indicator	On Screen Display
RF Aerial Input	75 Ohm (urban/road)
Operating Voltage	220-240V AC, 50Hz.
Audio	German-Nicom Stereo
Audio Output Power (W/RMS) (10% THD)	2 x 8
Power Consumption (W)	75
Network Standby Power Consumption (W)	< 2
TV Dimensions DxLxH (with stand) (mm)	235 x 892 x 573
TV Dimensions DxLxH (without stand) (mm)	63/95 x 892 x 517
Display	39"
Operation temperature and operation humidity	0°C up to 40°C, 85% humidity max.

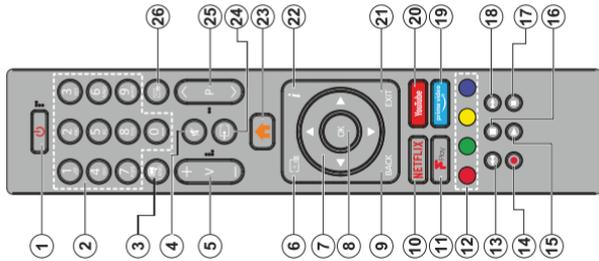

- Standby:** Switches On / Off the TV
- Numeric buttons:** Switches the channel, enters a number or a letter in the text box on the screen.
- Language:** Switches among sound modes (analogue TV), displays and changes audiosubtitle language and turns subtitles on or off (digital TV, where available)
- Mute:** Completely turns off the volume of the TV
- Volume +/-:**
- Guide:** Displays the electronic programme guide
- Directional buttons:** Helps navigate menus, content etc. and displays the subpages in TXT mode when pressed Right or Left
- OK:** Confirms user selections, holds the page (in TXT mode), views **Channels** menu (DTV mode)
- Back/Return:** Returns to previous screen, previous menu, opens index page (in TXT mode). Quickly cycles between previous and current channels or sources
- Netflix:** Launches the Netflix application
- Freewiew Play:** Connects to the Freewiew Play platform where you can access available catch-up TV services
- Coloured Buttons:** Follow the on-screen instructions for coloured button functions
- Rewind:** Moves frames backwards in media such as movies
- Record:** Records programmes
- Play:** Starts to play selected media
- Pause:** Pauses the media being played, starts timeshift recording
- Stop:** Stops the media being played
- Fast Forward:** Moves frames forward in media such as movies
- Prime Video:** Launches the Amazon Prime Video application
- YouTube:** Launches the YouTube application
- Exit:** Closes and exits from displayed menus or returns to previous screen
- Info:** Displays information about on-screen content, shows hidden information (reveal - in TXT mode)
- Menu:** Displays TV menu
- Source:** Shows available broadcast and content sources
- Programme +/-:**
- Text:** Displays teletext (where available), press again to superimpose the teletext over a normal broadcast picture (mix)

Connector	Type	Cables	Device
	VGA Connection (back)		
	PC/YPbPr Audio Connection (back)		
	HDMI Connection (side/back)		
	S/PDIF (Optical Out) Connection (back)		
	Back AV (Audio/Video) Connection (back)		
	Headphone Connection (side)		
	YPbPr Video Connection (back)		
	USB Connection (side)		
	CI Connection (side)		
	Ethernet Connection (back)		

See the illustrations on the left side. You can use YPbPr to VGA cable to connect YPbPr signal to VGA and YPbPr to VGA signal to YPbPr and YPbPr at the same time. You will enable PC/YPbPr audio, you will need to use the back audio inputs with a YPbPr/PC audio cable for audio connection. When using audio connection, you should refer from a third party in the market. If not supplied, we recommend that you plug all your cables into the back of the TV before mounting on the wall. Insert or remove the cables for the front panel as SWITCHED OFF. You should refer to the module instruction manual for details of the settings. The/ Each USB input of your TV supports devices up to 500mA. Connecting devices that have current more than 500mA may damage your TV. When connecting equipment using a HDMI cable to your TV, to guarantee sufficient immunity against parasitic frequency radiation, you have to use a high speed shielded (high grade) HDMI cable with ferrites.

If you want to connect a device to the TV, make sure that both the TV and the device are turned off before making any connection. After the connection is done, you can turn on the units and use them.

### Switching On/Off

To switch the TV On  
Connect the power cord to a power source such as a wall socket (220-240V AC, 50 Hz).

To switch on the TV from standby mode either:

- Press the Standby button, **Programme** +/-, or a numeric button on the remote control.
- Press the middle of the side function switch on the TV in.

### To Switch the TV Off

Press the Standby button on the remote control or press the middle of the side function switch on the TV in and hold it down for a few seconds, the TV will switch into standby mode.

To power down the TV completely, unplug the power cord from the mains socket.

**Note:** When the TV is switched into standby mode, the standby LED can blink to indicate that features such as Standby Search, Over-Air-Download or Timer is active. The LED can also blink when you switch on the TV from standby mode.

### First Time Installation

When turned on for the first time, the language selection screen is displayed. Select the desired language and press **OK**. In the following steps of the installation guide, set your preferences using the directional buttons and **OK** button.

After the language selection, you will be asked whether you want to change accessibility settings. Highlight **Yes** and press **OK** to change. Refer to **System Menu Content** section for detailed information on available options.

Set your preference on the next screen, then press **Next** and confirm a PIN at this point. The selected PIN cannot be 0000. You have to enter it if you are asked to enter a PIN for any menu operation later.

You can activate **Store Mode** option in the next step. This option will configure your TV's settings for store environment and depending on the TV model being used, the supported features off may be displayed on the screen as an info banner. This option is intended only for store use. It is recommended to select **Home Mode** for home use. This option will be available in **Settings->Home->More** menu and can be turned off/ on later. Make your selection and press **OK** to continue.

The picture mode selection screen will then be displayed. In order for your TV to consume less power, select **Normal** and press **OK** to continue. You can change your selection later using the **Mode** option in the **Settings->Picture** menu.

Depending on the model of your TV and the country selection **Privacy Settings** menu may appear at this point. Using this menu you can set your privacy privileges. Highlight a feature and use Left and Right directional buttons to enable or disable. Read the related explanations displayed on the screen

for each highlighted feature before making any changes. You can use **Programme** +/- buttons to scroll up and down to read the entire text. You will be able to change your preferences at any time later from the **Settings->System->Privacy Settings** menu. If the **Internet Connection** option is disabled and not displayed. If you have any questions, complaints or comments regarding this privacy policy or its content, please contact us at email at [privacy@toshiba.com](mailto:privacy@toshiba.com).

Highlight **Next** and press **OK** button on the remote control on the next screen. The following settings menu will be displayed. Please refer to **Connectivity** section to configure a wired or wireless connection if you want your TV to consume less power in standby mode, you can disable the **Wake On** option by setting it off. After the settings are completed, highlight **Next** and press **OK** button to continue.

On next screen you can set broadcast types to be searched, set your encrypted channel searching preferences. Additionally you can set a broadcast type as your favourite one. Priority will be given to the type and broadcast type during the channel search and the channels will be listed in the order of the channel list. When finished, highlight **Next** and press **OK** to continue.

### About Selecting Broadcast Type

To turn a search option for a broadcast type highlight it and press **Next** button. In the next screen, the option will be checked. To turn the search option off, clear the checkbox by pressing **OK** after moving the focus on the desired broadcast type option.

**Digital Aerial:** If **D. Aerial** broadcast search option is turned on, the TV will search for digital terrestrial broadcasts after other initial settings are completed.

**Digital Cable:** If **D. Cable** broadcast search option is turned on, the TV will search for digital cable broadcasts after other initial settings are completed. A message will be displayed before starting to search asking if you want to perform cable network search. If you select **Yes** and press **OK** you can select **Network ID** and set values such as **Frequency**, **Network ID** and **Search Stop** on the next screen. You select **No** and press **Next** button to continue. For **Search Stop** **Frequency** and **Search Stop** on the next screen. When finished, highlight **Next** and press **OK** button to continue.

**Note:** Searching duration will change depending on the selected **Search Stop**.

**Satellite:** If **Satellite** broadcast search option is turned on, the TV will search for digital satellite broadcasts after other initial settings are completed. Before satellite search is performed some settings should be made. **Antenna Type** menu will be displayed first. You can select **Antenna Type** as **Direct**, **Left or Right Cable** or **DiSEqC** switch by using **Left** or **Right** buttons. After selecting your antenna type press **OK** to

see the options to proceed. **Continue**, **Transponder list** and **Configure LNB** options will be available. You can change the transponder and LNB settings using the related menu options.

• **Direct:** If you have a single receiver and a direct satellite dish, select this antenna type. Press **OK** to continue. Select an available satellite on the next screen and press **OK** to scan for services.

• **Single Satellite Cable:** If you have multiple receivers and a single satellite cable system, select this antenna type. Press **OK** to continue. Configure settings by following instructions on the next screen. Press **OK** to scan for services.

• **DiSEqC switch:** If you have multiple satellite dishes and a DiSEqC switch, select this antenna type. Then set the DiSEqC version and press **OK** to continue. You can set up to four satellites (if available for version v1.0) and sixteen satellites for version v1.1 on the next screen. Press **OK** button to scan the first satellite in the list.

**Analogue:** If **Analogue** broadcast search option is turned on, the TV will search for analogue broadcasts after other initial settings are completed.

After the initial settings are completed, TV will start to search for available broadcasts of the selected broadcast types.

While the search continues current scan results will be displayed at the bottom of the screen. After all available stations are stored, **Channels** menu will be displayed. You can edit the channel list according to your preferences using the **Edit** tab options or press the **Menu** button to quit and watch TV.

While the search continues a message may appear, asking whether you want to sort channels according to the LCN(\*)<sup>1</sup>. Select **Yes** and press **OK** to confirm. (\*LCN is the Logical Channel Number system that organizes available channels in accordance with a recognizable channel number sequence (if available).

**Note:** Do not turn off the TV while initializing first time installation. Note that, some options may not be available depending on the country selection.

### Using Satellite Channel Table Feature

You can perform these operations using the **Settings->Installation->Satellite Settings->Satellite Channel Table** menu. There are two options regarding this feature.

You can download or upload satellite channel table data in order to perform these functions a USB device must be connected to the TV.

You can upload current services and related satellites & transponders in TV, to a USB device.

Additionally you can download one of the satellite channel table files stored in USB device, to the TV. When you select one of these files, all services and related satellites and transponders in the selected

file will be stored in the TV. If there are any installed terrestrial cable and/or analogue services, they will be kept and only satellite services will be removed. Afterwards, check your antenna settings and make changes if necessary. An error message stating **No Signal** may be displayed if the antenna settings are not configured properly.

### Media Playback via USB Input

Supply external hard disk drives or USB memory stick to your TV by using the USB inputs of the TV.

**IMPORTANT!** Back up the files on your storage devices before connecting them to the TV. Manufacturer will not be responsible for any file damage or data loss. Certain types of USB devices (e.g. MP3 Players) or USB hard disk drive/wireless memory sticks may not be compatible with this TV. The TV supports FAT32 and NTFS disk formatting but recording will not be available with NTFS formatted disks.

While formatting USB hard drives which have more than 1TB (Tera Byte) storage space you may experience some problems in the formatting process. Wait a little while before each plugging and unplugging as the player may still be reading files. Failure to do so may cause physical damage to the USB player and the USB device itself. Do not pull out your drive while playing a file.

You can use USB hubs with your TV's USB inputs. External power supplied USB hubs are recommended in such a case.

It is recommended to use the TV's USB input (e) directly, if you are going to connect a USB hard disk.

**Note:** When viewing image files the Media Browser menu displays 100 image files stored on the connected USB devices.

### USB Recording

#### Recording a Programme

**IMPORTANT:** When using a new USB hard disk drive, it is recommended that you first format the disk using your TV's **Format Disk** option in the **TV->Recordings->Settings** menu.

To record a programme, you should first connect a USB disk to your TV while the TV is switched off. You should turn on the TV to enable the recording feature. Then switch on the USB drive should have 2 GB free space and be USB 2.0 compatible. If the USB drive is not compatible an error message will be displayed. To record long duration programmes such as movies, it is recommended to use USB Hard disk drives (HDD's).

Recorded programmes are saved into the connected USB disk. If desired, you can store recordings onto a computer; however, these files will not be available to be played on a computer. You can play the recordings only via your TV.

## Watching Recorded Programmes

Select **Recordings** from the **TV menu**. Select a recorded item from the list (if previously selected). Press the **OK** button to view the **Options** menu. Select an option then press **Menu** and **menu items will not be available during the playback**.

Press the **Stop** button to stop a playback and return to the **Recordings**.

### Slow Forward

If you press **Pause** button while watching recorded programmes, the **slow forward** feature will be available. You can use **Fast Forward** button to slow forward. Pressing **Fast Forward** button consecutively will change slow forwarding speed.

### Recording Settings

You can configure your recording preferences using the **Settings** tab by using **Left** or **Right** button, and press **OK**. Then select the desired item in the sub-menu and set by using **Left** or **Right** button.

**Start early:** You can set recording timer's starting time to start earlier by using this setting.

**End late:** You can set recording timer's end time to end later by using this setting.

**Max Timeshift:** This setting allows you to set the maximum duration for the timeshift recording. Available options are approximate and the actual recording time may change in practice depending on the broadcast. The reserved and free storage space values will change according to this setting. Make sure that you have enough free space otherwise instant recording may not be possible.

**Auto discard:** You can set the **Discard** type as **None**, **Oldest**, **Longest** or **Shortest**. If it is not set to **None**, you can set the **Unplayed** option as **Included** or **Excluded**. These options determine the preferences for deleting the recordings in order to obtain more storage space for ongoing records.

**Hard disk information:** You can view detailed information about the USB storage device connected to your TV. Highlight and press **OK** to see and press **Back/Return** to close.

**Format Disk:** If you want to delete all files on the connected USB storage device and convert the disk format to FAT32, you can use this option. Press **OK** button while the **Format Disk** option is highlighted. A menu will appear on the screen, requiring you to enter the PIN(\*). After you enter the PIN, a confirmation message will be displayed. Select **Yes** and press **OK** to start formatting the USB storage device. Select **No** and press **OK** to cancel.

(\*) Default PIN could have been set to 0000 or 1234. If you have defined the PIN in the requested depending on the country

selection) during the **First Time Installation** use the PIN that you have defined.

**IMPORTANT:** Formatting your USB drive will erase all data on it and it's file system will be converted to FAT32. Almost cases, recording errors will be fixed after a format but you will lose ALL your data.

If **USB disk writing speed too slow to record\*** recording is displayed on the screen while starting a recording, try resuming the recording. If you still get the same error, it is possible that your USB disk does not meet USB speed requirements. Try connecting another USB disk.

### Media Browser

You can play back music and movie files and display photo files stored on a USB storage device by connecting it to your TV. Connect a USB storage device to one of the USB inputs located on the side of the TV.

After connecting a USB storage device to your TV, **Media Browser** menu will be displayed on the screen. You can access the content of the connected USB device any time later from the **Sources** menu. Select the related USB input option from this menu and press **OK**. You can also press the **Source** button on the remote and then select your USB storage device from the list of sources. Then select the file of your choice and press **OK** to display or play it back.

You can set your **Media Browser** preferences by using the **Settings** menu. **Settings** menu can be accessed via the information bar which is displayed on the bottom of the screen while playing back a video file or displaying a picture file. Press the **Info** button if the information bar has disappeared, highlight the gear wheel symbol positioned on the right side of the information bar and press **OK**. **Picture Settings**, **Sound Settings**, **Media Browser Settings**, and **Options** menus will be available. The content of the **Settings** menu may change according to the type of the currently open media file. **Only Sound Settings** menu will be available while playing back audio files.

**Loop/Shuffle Mode Operation**

Start playback and activate	All files in the list will be continuously played in original order

Start playback and activate	The same file will be played continuously (repeat)

Start playback and activate	All files in the list will be played once in random

Start playback and activate	All files in the list will be continuously played in the same random order

To use the functions on the information bar highlight the symbol of the function and press **OK**. To change the status of a function highlight the symbol of the function and press **OK** as much as needed. If the symbol is marked with a red cross, that means it is deactivated.

### Custom Boot Up Logo

You can personalize your TV and see your favourite image or photo on the screen each time you turn your TV boots up. To do this, copy your favourite image files into a USB disk and open them in the **Media Browser**. Select USB input from the **Sources** menu and press **OK**. If and you have chosen the desired image, highlight it and press **OK** to view it in full screen. Press the **Info** button to highlight the gear wheel symbol on the information bar. Press **OK** to enter the **Set Boot Logo** option to be available. Highlight it and press **OK** again to choose the image as custom boot up logo. A confirmation message will be displayed. Select **Yes** and press **OK** again. If the image is suitable(\*) you will see it on the screen during the TV's next boot up.

**Note:** If you perform a **First Time Installation** the TV will return to using the default logo, if any.

(\*) Images should be in .jpg file formats. Only files with sizes no greater than 4MB are supported. FollowMe TV

With your mobile device you can stream the current broadcast from your TV using the **FollowMe TV** feature. Install the appropriate Smart Center application to your mobile device. Start the application. For further information on using this feature refer to the instructions of the application you use.

**Note:** Depending on model, your TV may not support this function. The application may not be compatible with all mobile devices. Only devices that are connected to the same network both of the devices must be connected to the same network.

### CEC

This function allows to control the CEC-enabled devices, that are connected through HDMI ports by using the remote control of the TV.

The **CEC** option in the **Settings>System>Device Settings** menu should be set as **Enabled** at first. Press the **Source** button and select the HDMI input of the connected CEC device from the **Sources List** menu. When new CEC source device is connected, it will be listed in source menu with its own name instead of the connected-HDMI ports name (such as DVD Player, Recorder 1 etc.).

The TV remote is automatically able to perform the main functions after the connected HDMI source has been selected. To terminate this operation and control the TV via the remote again, press and hold the "Zero" button on the remote control for 3 seconds.

Lip Sync delay may occur during the timeshifting. Radio recording is supported. The TV can record programmes up to 16 hours. Recorded programmes are split into 4GB partitions. If the write speed of the connected USB disk is not sufficient, the recording will fail and the timeshifting feature may not be available.

It is recommended to use USB hard disk drives for recording HD programmes.

Do not pull out the USB/HDD during a recording. This may harm the connected USB/HDD.

If the AC cord is unplugged while there is an active USB-recording timer setting, it will be cancelled. Multipartition support is available. A maximum of two different partitions are supported. The first partition of the USB disk is used for USB Recording ready features. It also must be formatted as the primary partition to be used for the USB Recording ready features.

Some stream packets may not be recorded because of signal problems, as a result sometimes videos may freeze during playback.

Record, Play, Pause, Display (playlist dialogue) keys can not be used when teletext is on. If recording starts from timer when teletext is on, teletext is automatically turned off. Also teletext usage is disabled when there is an ongoing recording or playback.

While recording a programme in the background you can use menu options, switch to another source or use **Media Browser** functions, such as viewing pictures, playing video and music files, and even play back the ongoing recording.

### Timeshift Recording

Press **Pause** button while watching a broadcast to activate timeshifting mode. In timeshifting mode, the programme is paused and simultaneously recorded to the connected USB disk.

Press **Play** button again to resume the paused programme from where you stopped. Press the **Stop** button to stop timeshift recording and return to the live broadcast.

Timeshift cannot be used while in radio mode. You can use the timeshift/rewind feature after resuming normal playback or fast-forward option.

### Instant Recording

Press **Record** button to start recording an event instantly while watching a programme. Press **Stop** button to cancel instant recording.

You can not switch broadcasts during the recording mode. While recording a programme or during the timeshifting, a warning message appears on the screen if your USB device speed is not sufficient.

You can disable the CEC functionality by setting the related option under the **Settings-System-Device Settings** menu accordingly.

The TV supports ARC (Audio Return Channel). This feature is an audio link meant to replace other cables between the TV and an audio system (AV receiver or speaker system).

When ARC is active, the TV will mute its other audio outputs, except the headphone jack, automatically and volume control buttons are directed to connected audio device. To activate ARC set the **Sound Output** option in the **Settings-Sound** menu as **HDMI ARC**.

**Note:** ARC is supported only via the HDMI2 input.

#### System Audio Control

Allows an Audio Amplifier/Receiver to be used with the TV. The volume can be controlled using the remote control of the TV. To activate this feature set the **Sound Output** option in the **Settings-Sound** menu as **HDMI ARC**. When **HDMI ARC** option is selected, CEC option will be set as **Enabled** automatically. If it is not already set, the TV speakers will be muted and the sound of the watched source will be provided from the connected sound system.

**Note:** The audio device should support System Audio Control feature.

#### Quick AI

You can use **Quick AI** option in the **TV** menu in order to manage your AI setting preferences. **AI on Sound** and **AI on Video** options will be available. Highlight an option and press **OK** to select or unselect. Then highlight **OK** and press **OK** to apply your changes.

**AI on Sound:** Works on **TV** source. When enabled, TV checks programme genre and adjusts sound settings accordingly if genre information is available.

**AI on Video:** Works on **TV** source. When enabled, TV checks programme genre and adjusts picture settings accordingly if genre information is available.

A small icon and information message will be displayed on the screen when settings are changed via **AI on TV** feature.

**E-Manual**  
You can find instructions for your TV's features in the E-Manual.

To access the E-Manual, enter **Settings** menu, select **Manuals** and press **OK**. For quick access press **Menu** button and then **Info** button.

By using the directional buttons select a desired category. Every category includes different topics. Select a topic and press **OK** to read instructions. To close the E-Manual screen press the **Exit** or **Menu** button.

**Note:** Depending on model, your TV may not support this function. The contents of the E-Manual may vary according to the model.

## Settings Menu Content

### Picture Menu Content

<b>Mode</b>	You change the picture mode to suit your preference or requirements. Picture mode can be set to one of these options: <b>Cinema</b> , <b>Game</b> (optional), <b>Sports</b> , <b>Dynamic</b> and <b>Natural</b> .
<b>Contrast</b>	Adjusts the light and dark values on the screen.
<b>Brightness</b>	Adjusts the brightness values on the screen.
<b>Sharpness</b>	Sets the sharpness value for the objects displayed on the screen.
<b>Colour</b>	Sets the colour value, adjusting the colours.
<b>Energy Saving</b>	For setting the <b>Energy Saving</b> to <b>Custom</b> , <b>Minimum</b> , <b>Medium</b> , <b>Maximum</b> , <b>Auto</b> , <b>Screen Off</b> or <b>Off</b> . <b>Note:</b> Available options may differ depending on the selected Mode.
<b>Backlight</b>	This setting controls the backlight level. The backlight function will be inactive if the <b>Energy Saving</b> is set to an option other than <b>Custom</b> .
<b>Picture Zoom</b>	Sets the desired image size format.
<b>Picture Shift</b>	This option may be available depending on the <b>Picture Zoom</b> setting. Highlight and press <b>OK</b> , then use directional buttons to shift the picture upwards or downwards.
<b>PC Position</b>	Appears only when the input source is set to <b>VGAPC</b> .
<b>Autoposition</b>	If the image is not centered in VGA mode use this option to automatically adjust the position of the image. Press <b>OK</b> to start the auto adjustment.
<b>H Position</b>	This item shifts the image horizontally to the right hand side or left hand side of the screen.
<b>V Position</b>	This item shifts the image vertically towards the top or bottom of the screen.
<b>Dot Clock</b>	Dot Clock adjustments correct the interference that appear as vertical banding in dot intensive presentations (like spreadsheets or paragraphs) or text in smaller fonts.
<b>Phase</b>	Depending on the input source (computer etc.) you may see a hazy or noisy picture on the screen. You can use phase to get a clearer picture by trial and error.
<b>Advanced Settings</b>	
<b>Dynamic Contrast</b>	You can change the dynamic contrast ratio to desired value.
<b>Colour Temp</b>	Sets the desired colour temperature value. <b>Cool</b> , <b>Normal</b> , <b>Warm</b> and <b>Custom</b> options are available.
<b>White Point</b>	If the <b>Colour Temp</b> option is set as <b>Custom</b> , this setting will be available. Increase the 'warmth' or 'coolness' of the picture by pressing <b>Left</b> or <b>Right</b> buttons.
<b>Blue Stretch</b>	White colour enhancement function that makes white colour more cooler in order to make more bright picture. Set as <b>On</b> to enable.
<b>Micro Dimming</b>	<b>Low</b> , <b>Medium</b> , <b>High</b> and <b>Off</b> options are available. <b>While Micro Dimming</b> is active, it will enhance contrast locally for each defined zone.
<b>Noise Reduction</b>	<b>Low</b> , <b>Medium</b> , <b>High</b> and <b>Off</b> options are available. If the signal is weak and the picture is noisy, use the <b>Noise Reduction</b> setting to reduce the amount of noise.
<b>Film Mode</b>	Films are recorded at a different number of frames per second to normal television programmes. Turn this feature on when you are watching films to see the last motion scenes clearly.
<b>Skin Tone</b>	Skin tone can be changed between -5 and 5.

<b>Colour Shift</b>	Adjust the desired colour tone.
<b>Colour Tuner</b>	Opens colour tuner settings. Set the <b>Colour Tuner</b> as enabled to adjust the <b>Hue, Colour</b> and <b>Brightness</b> values manually.
<b>Gamut Mapping</b>	You can use this option to set the range of colours displayed on your TV screen. When set as <b>On</b> , colours are set according to the source signal. When set as <b>Off</b> , the TV's maximum colour capacity is used by default (recommended option). <i>Note: This option may not be available depending on the TV model and its features.</i>
<b>HDMI Full Range</b>	While watching from a HDMI source, this feature will be visible. You can use this feature to enhance blackness in the picture.
<b>Reset</b>	Resets the picture settings to factory default settings (except <b>Game mode</b> ).
<i>While in VGA (PC) mode, some items in Picture menus will be unavailable. Instead, VGA mode settings will be added to the Picture menu while in PC mode.</i>	

<b>Sound Menu Content</b>	
<b>Dolby Audio</b>	<b>Smart, Movie, Music, News</b> and <b>Off</b> options will be available. Set as <b>Off</b> to disable. <i>Note: Some items in Sound menu will be grayed out and unavailable / set to an option other than Off.</i>
<b>Surround Sound</b>	Surround sound mode can be changed as <b>On</b> or <b>Off</b> . Sets the sound output preference. <b>TV, S/PDIF, HDMI ARC, Headphone Only</b> and <b>Lineout</b> options will be available. There will be no sound output except through the selected option and the headphone jack. When you connect an external amplifier to your TV using the headphone jack, you can select this option as <b>Lineout</b> . If you have connected headphones to the TV, set this option as <b>Headphone Only</b> . Please ensure before using headphones that this menu item will be set to maximum which could damage your hearing. If <b>HDMI ARC</b> option is selected, <b>CEC</b> feature will be enabled. <i>Note: Depending on the selected option some items in Sound menu will appear as grayed out and will be unavailable.</i>
<b>AVL (Automatic Volume Limiting)</b>	Sets the sound to obtain fixed output level between programmes. If the <b>Dolby Audio</b> menu item is set to an option other than <b>Off</b> the <b>AVL</b> setting options will change. <b>Auto, Night, Normal</b> and <b>Off</b> options will be available. In <b>Auto</b> mode the TV will switch to <b>Normal</b> or <b>Night</b> mode automatically according to the current time information. If no time information is available this option will always function as <b>Normal</b> . When the TV switches to <b>Night</b> mode for the first time after setting this option as <b>Auto</b> , an information bar will pop up on the screen. Please note that compared to <b>Normal</b> mode <b>Night</b> mode provides more aggressive dynamic compression control which is suitable for silent environments.
<b>Advanced Settings</b>	
<b>Equalizer</b>	Selects the equalizer mode. Custom settings can be made only when in <b>User</b> mode.
<b>Dynamic Bass</b>	Enables or disables the Dynamic Bass.
<b>Sound Mode</b>	You can select a sound mode (if the viewed channel supports).
<b>Digital Out</b>	Sets digital out audio type.
<b>Headphone</b>	Sets headphones volume. This option will not be available if the <b>Sound Output</b> option is set as <b>Lineout</b> . Please ensure before using headphones that the headphone volume is set to a low level, to prevent damage to your hearing.
<b>Balance</b>	Sets sound balance. This feature will be activated if <b>Sound Output</b> option is set as <b>TV</b> or <b>Headphone Only</b> . Balance item adjusts the balance level of the TV speakers and headphone together.
<b>Reset</b>	Resets some of the sound settings to factory defaults.

Network Menu Content	Network Menu Content
<b>Network Type</b>	Disable the network connection or change the connection type.
<b>Scan Wireless Networks</b>	Start a search for wireless networks. This option will be available if the <b>Network Type</b> is set as <b>Wireless Device</b> .
<b>Press WPS on your wifi router</b>	If your modem/router device has WPS, you can directly connect to it using this option. Highlight this option and press <b>OK</b> . Go to your modem/router device and press the <b>Network</b> button on it to make the connection. This option will be available if the <b>Network Type</b> is set as <b>Wireless Device</b> .
<b>Internet Speed Test</b>	Start a speed test to check your connection bandwidth. The result will be displayed on the screen when finished.
<b>Advanced Settings</b>	Change the IP and DNS configurations of your TV.
<b>Wake On</b>	Enable or disable this feature by setting it as <b>On</b> or <b>Off</b> . <i>Note: A wireless LAN adaptor (WLAN USB Dongle) is required to use wireless network features. The wireless adaptor is not supplied with the unit. It can be purchased separately. For more information, consult your local dealer or retail outlet where you bought your TV. For detailed information on the options of the menu items, refer to the <b>Connecting</b> section.</i>
<b>Installation Menu Content</b>	
<b>Automatic channel scan (Return)</b>	Displays automatic tuning options. <b>D. Aerial</b> : Searches and stores aerial DVB stations. <b>D. Cable</b> : Searches and stores cable DVB stations. <b>Analogue</b> : Searches and stores analogue stations. <b>Satellite</b> : Searches and stores satellite stations.
<b>Manual channel scan</b>	This feature can be used for direct broadcast entry.
<b>Network channel scan</b>	Searches for the linked channels in the broadcast system. <b>D. Aerial</b> : Searches for aerial network channels. <b>D. Cable</b> : Searches for cable network channels. <b>Satellite</b> : Searches for satellite network channels.
<b>Analogue fine tune</b>	You can use this setting for fine tuning analogue channels. This feature is not available if no analogue channels are stored and if currently watched channel is not an analogue channel.
<b>Satellite Settings</b>	Displays satellite settings. <b>Satellite list</b> : Displays available satellites. You can <b>Add</b> , <b>Delete</b> satellites or <b>Edit</b> satellite settings on the list. <b>Antenna installation</b> : You can change satellite antenna settings and/or start a satellite scan. <b>Satellite Channel Table</b> : You can upload or download satellite channel table data using the related options.
<b>Installation Settings (optional)</b>	Displays installation settings menu. <b>Standby Search (*)</b> : Your TV will search for new or missing channels while in standby. Any new found broadcasts will be shown. <b>Dynamic Channel Update(*)</b> : If this option is set as <b>Enabled</b> , the changes on the broadcasts such as frequency, channel name, subtitle language etc., will be applied automatically while watching. <i>(*) Availability depends on model.</i>
<b>Clear Service List</b>	Use this setting to clear channels stored. This setting is visible only when the <b>Country</b> option is set to Denmark, Sweden, Norway or Finland.
<b>Select Active Network</b>	This setting allows you to select only the broadcasts within the selected network to be listed in the channel list. This feature is available only for the country option of Norway.
<b>Signal Information</b>	You can use this menu item to monitor signal related information such as signal level/quality, network name etc for available frequencies.
<b>First time installation</b>	Deletes all stored channels and settings, resets TV to factory settings.

System Menu Content	System Menu Content
<b>Conditional Access</b>	Controls conditional access modules when available.
<b>Language</b>	You may set a different language depending on the broadcaster and the country. Manage your privacy privileges for smart TV related applications. Press <b>OK</b> to enter the menu and set according to your preferences.
<b>Privacy Settings</b>	
<b>Parental</b>	Enter correct password to change parental settings. You can easily adjust <b>Menu Lock</b> , <b>Maternity Lock</b> , <b>Child Lock</b> or <b>Guidance</b> in this menu. You can also set a new <b>PIN</b> or change the <b>Default CICAM PIN</b> using the related options. <i>Note: Some menu options may not be available depending on the country selection in the First Time Installation. Default PIN could have been set to 0000 or 1234. If you have defined the PIN(s) requested depending on the country selection during the First Time Installation, use the PIN that you have defined.</i>
<b>Date/Time</b>	Set date and time.
<b>Sources</b>	Edit the names, enable or disable selected source options.
<b>Accessibility</b>	Displays accessibility options of the TV.
<b>High Contrast</b>	Increase the contrast of the menu options and texts to make them easier to read. <b>White Text</b> , <b>Yellow Text</b> and <b>Off</b> options will be available.
<b>Hard of Hearing</b>	Enables any special feature sent from the broadcaster.
<b>Audio Description</b>	A narration track will be played for the blind or visually impaired audience. Press <b>OK</b> to see all available <b>Audio Description</b> menu options. This feature is available only if the <b>Broadcasters support feature is not available in recording or time shifting mode</b> . <i>Note: Audio description source feature is not available in recording or time shifting mode.</i>
<b>Dialogue Enhancement</b>	This feature provides sound post-processing options for speech-gated dialogue enhancement. <b>Off</b> , <b>Low</b> , <b>Medium</b> and <b>High</b> options will be available. Set according to your preference. <i>Note: This feature has an effect only if input audio format is AC-4 and this effect only applies to TV loudspeaker output.</i>
<b>Spoken Subtitles</b>	Default preference of spoken subtitles is selected with this setting option. To make spoken subtitles priority higher than normal ones, this option should be set to <b>On</b> . This option may not be available depending on the model of your TV and is only visible when the source is set to <b>TV</b> .
<b>Magnification</b>	Enables the use of button combinations to magnify the screen. <b>On</b> and <b>Off</b> options will be available. Set as <b>On</b> to enable. Magnification support will be enabled or disabled with long-press of the numeric button <b>5</b> . First top-left quadrant of the screen will be zoomed. After the magnification support is enabled, long-press of the numeric buttons <b>2</b> , <b>4</b> , <b>6</b> , <b>8</b> will move the zoomed area to up, left, right and down.
<b>Minimap</b>	Minimap is enabled and deactivated by default. It will be activated when <b>Magnification</b> feature is enabled. With this option, you can prevent magnification feature from displaying the minimap.
<b>Click Sound</b>	This option enables the key click sound on TV menu. Set to <b>On</b> to enable.
<b>Highlight programmes with</b>	
<b>[S] Subtitle</b>	If this option is enabled and if any electronic programme guide event has "Subtitle" access service, this events will be highlighted with another colour.
<b>[SL] Sign Language</b>	If this option is enabled and if any electronic programme guide event has "Sign Language" access service, this events will be highlighted with another colour.
<b>[AD] Audio Description</b>	If this option is enabled and if any electronic programme guide event has "Audio Description" access service, this events will be highlighted with another colour.

<b>Netflix</b>	If this feature is supported by your TV, you can view your ESN(*) number and deactivate Netflix. <small>(*) ESN number is an unique ID number for Netflix, created especially to identify your TV.</small>
<b>Device Settings</b>	
<b>CEC</b>	With this setting you can enable and disable CEC functionality completely. Press <b>Left</b> button to enable or disable the feature.
<b>CEC Auto Power On</b>	This function allows the connected HDMI-CEC compatible device to turn on the TV and switch to its input source automatically. Press <b>Left</b> or <b>Right</b> button to enable or disable the feature.
<b>Voice Assistant</b>	
<b>Alexa Built-in</b>	Starts the setup process for this feature manually. If the setup is priority completed <b>Alexa Language, Alexa On Standby, Alexa Alarm Volume</b> and <b>Sign Out</b> options will be available. Refer to <b>Alexa Ready</b> section for more information.
<b>Alexa On Standby</b>	Enables or disables Alexa On Standby feature. If enabled Alexa will be available while the TV is in standby mode. <small>Note: This feature may affect your TV's power consumption.</small>
<b>Alexa Alarm Volume</b>	Sets the volume level for Alexa alarms.
<b>Sign Out</b>	You can use this option to sign out. If you sign out Alexa Built-in feature will be disabled.
<b>Works With Alexa</b>	Starts the setup process for this feature manually. If the setup is priority completed <b>Sign Out</b> option will be available. Refer to <b>Alexa Ready</b> section for more information.
<b>Sign Out</b>	You can use this option to sign out. If you sign out Works With Alexa feature will be disabled.
<b>Google Assistant</b>	Starts the setup process to enable your TV to work with Google Assistant devices. Highlight <b>Start</b> and press <b>OK</b> . If the setup is priority completed <b>Sign Out</b> option will be available. If you sign out Google Assistant feature will be disabled. Refer to <b>Google Assistant</b> section for more information.
<b>More</b>	Displays other setting options of the TV.
<b>Menu Timeout</b>	Changes timeout duration for menu screens.
<b>Standby LED</b>	If set as <b>Off</b> the standby LED will not light up when the TV is in standby mode.
<b>Software Upgrade</b>	Ensures that your TV has the latest firmware. Press <b>OK</b> to see the menu options.
<b>Application Version</b>	Displays current software version.
<b>Auto Power Down</b>	Sets the delayed time for the TV to automatically go into standby mode when not being operated. This option can be set from 1 to 8 hours in steps of 1 hour. You can also disable this option by setting as <b>Off</b> .
<b>Subtitle Mode</b>	This option is used to select which subtitle mode will be on the screen ( <b>DVB</b> subtitle / <b>Teletext</b> subtitle) if both is available. Default value is <b>DVB</b> subtitle. This feature is available only for the country option of Norway.
<b>Biss Key</b>	Biss is a satellite signal scrambling system that is used for some broadcasts. If you need to enter Biss key on a broadcast, you can use this setting. Highlight <b>Biss Key</b> and press <b>OK</b> to enter keys on the desired broadcast.

<b>Store Mode</b>	Select this mode for store display purposes. Whilst <b>Store Mode</b> is enabled, some items in the TV menu may not be available.
<b>Audio Video Sharing</b>	This feature allows you to share files stored on your smartphone or tablet pc. If you have a compatible smartphone or tablet pc and the appropriate software is installed, you can share/play photos on your TV. See instructions of your sharing software for more information.
<b>Power Up Mode</b>	This setting configures the power up mode preference. <b>Last State</b> and <b>Standby</b> options are available.
<b>Virtual Remote</b>	Enable or disable the virtual remote feature.
<b>OSS</b>	Displays Open Source Software license information.
<b>Application Priority</b>	You can set your preference regarding the priority between the broadcast applications and other applications using this option. In case a CEC remote is inserted into the TV and a connection is made between the applications the priority will be given to the selected type of application.

Note: Some options may not be available depending on the model of your TV and the selected country in the First Time Installation.

## General TV Operation

### Using the Channel List

The TV sorts all stored stations in the channel list. You can edit this channel list, set favourites or set active stations to be channelised by using the **Channels** menu options. Press the **OK** button to open the channelised. You can filter the listed channels or make advanced changes in the current list using the **Filter** and **Edit** tab options. Highlight the tab you want and press **OK** to see available options.

### Managing the Favourite Lists

You can create four different lists of your favourite channels. Enter the **TV-Channels** menu or press the **OK** button in order to open the **Channels** menu. Highlight the **Edit** tab and press **OK** to see the editing options and select the **Tag/Untag channel** option. Select the desired channel on the list by pressing the **OK** button while the channel is highlighted. You can make multiple choices. You can also use the **Tag/Untag** all option to select all channels on the list. Then press **Back/Return** button to return to the **Edit** menu options. Select **Add/Remove Favourites** option and press the **OK** button again. Favourite channel list options will be displayed. Set the desired list option to **On**. The selected channels will be added to the list. In order to remove a channel or channels from the favourite list follow the same steps and set the desired list option to **Off**.

You can use the filtering function in the **Channels** menu to filter the channels in the channel list permanently according to your preferences. For instance, using the options of the **Filter** tab, you can set one of your four favourite lists to be displayed every time the channel list is opened.

### Configuring Parental Settings

The **Parental** menu options can be used to prohibit users from viewing of certain programmes, channels and using of menus. These settings are located in the **Settings-System-Parental** menu. To display parental menu options, a PIN should be entered. After coding the correct PIN, a PIN should be displayed.

**Menu Lock:** This setting enables or disables access to all menus or installation menus of the TV.

**Maturity Lock:** If this option is set, TV gets the maturity information from the broadcast and if its maturity level is disabled, prohibits access to the broadcast.

**Note:** If the country option in the **First Time Installation** is set as *France, Italy or Austria, Maturity Lock's value will set to 18 as default.*

**Child Lock:** If this option is set to **On**, the TV can only be controlled by the remote control. In this case the control buttons on the TV will not work.

**Internet Lock:** If this option is set to **ON**, the internet using applications will be disabled. Set to **OFF** to release these applications again.

**Set PIN:** Defines a new PIN number.

**Default/CICAM PIN:** This option will appear as greyed out if no CI module is inserted into the CI slot of the TV. You can manage the default PIN of the CI CAM using this option.

**Note:** *Default PIN could have been set to 0000 or 1234. If you have changed the PIN setting on the TV by any selection during the **First Time Installation** use the PIN that you have defined.*

Some options may not be available depending on the model and/or on the country selection in the **First Time Installation**.

### Electronic Programme Guide

By means of electronic programme guide function of your TV you can browse the event schedule of the currently installed channels on your channel list. It can be used to check and broadcast whether this feature is supported or not.

To access the programme guide, press the **Guide** button on your remote. You can also use the **Guide** option under **TV** menu.

There are 2 different types of schedule layouts available, **Timeline Schedule** and **Now/Next**. To switch between these layouts highlight the tab with the name of the alternative layout on the upper side of the screen and press **OK**.

Use the directional buttons to navigate through the programme guide. Use the **Back/Return** button to use the tab options on the upper side of the screen.

### Timeline Schedule

In this layout option, all events of the listed channels will be displayed by timeline. You can use the directional buttons to scroll through the list of the events. Highlight an event and press **OK** to display event options menu.

Press **Back/Return** button to use available tab options. Highlight **Filter** tab and press **OK** to see the filtering options. To change the layout highlight **Now/Next** and press **OK**. You can use the **Previous Day** and **Next Day** options to display the events of the previous and next day.

Highlight **Extras** tab and press **OK** to access below options.

**Highlight Genre:** Displays **Highlight Genre** menu. Select a genre and press **OK**. The events in the programme guide matching the selected genre will be highlighted.

**Guide Search:** Displays searching options. Using these options, you can search the programme guide database in accordance with the selected criteria. Matching results will be listed.

**Note:** Displays current event of the highlighted channel.

**Zoom:** Highlight and press **OK** to see events in a wider time interval.

### Now/Next Schedule

In this layout option, only the current and next events of the listed channels will be displayed. You can use the directional buttons to scroll through the list of the events.

Press **Back/Return** button to use available tab options. Highlight **Filter** tab and press **OK** to see the filtering options. To change the layout highlight **Timeline Schedule** and press **OK**.

### Event Options

Use the directional buttons to highlight an event and press **OK** button to display **Options** menu. The following options are available.

**Select channel:** Using this option, you can switch to the selected channel in order to watch it. The programme guide will be closed.

**Note Info:** Display detailed information on the selected event. Use up and down directional buttons to scroll through the text.

**Timer on/Event / Delete Timer on Event:** Select **Timer on/Event** option to see **OK** button. Select **Timer on/Event** option to see **OK** button. Select **Delete Timer on Event** option to cancel an already set timer for future events. To cancel an already set timer highlight that event and press the **OK** button. Then select **Delete Timer on Event** option. The timer will be cancelled.

**Record / Delete Rec. Timer:** Select the **Record** option and press the **OK** button. If the event is going to be broadcasted at a future time, it will be added to Timers list to be recorded. If the selected event is immediately broadcasted at the moment, recording will start immediately.

To cancel an already set record timer, highlight that event and press the **OK** button and select the option **Delete Rec. Timer**. The record timer will be cancelled.

**IMPORTANT:** Connect a USB disk to your TV while the TV is switched off. You should then switch on the TV to enable the recording feature.

**Note:** You cannot switch to any other channel while there is an active recording or timer on the current channel.

It is not possible to set timer or record timer for two or more individual events at the same time interval.

### Integrated Catch-Up Services

You can enjoy Freeview Play catch-up TV services that work directly through the electronic programme guide. Whilst you are on a channel use the directional buttons to scroll back in time through the time-line-based guide. You will see contents from last few days. Available catch-up contents may change according to the selected channel and will be displayed in the **OK** button.

Highlight the content you want to play back and press the **OK** button. You will be connected to your home. Make sure that your TV is wanted to your home network in order to use the catch-up services. For further information regarding this matter and other requirements for Freeview Play services refer to the **Connectivity and Freeview Play Platform** sections.

### Teletext Services

Press the **Text** button to enter. Press again to activate mix mode, which allows you to see the teletext page and the TV broadcast at the same time. Press once more to exit. If available, sections in the teletext pages will become colour-coded and can be selected by pressing the coloured buttons. Follow the instructions displayed on the screen.

### Digital Teletext

Press the **Text** button to view digital teletext information. Operate it with the coloured buttons, cursor buttons and the **OK** button. The operation method may differ from the previous version. Press the **OK** button to allow the instructions displayed on the digital teletext screen. When the **Text** button is pressed again, the TV returns to television broadcast.

### Software Upgrade

Your TV is capable of finding and updating the firmware automatically via the broadcast signal or via internet.

### Software upgrade search via broadcast interface

On the main menu select **Settings-System** and then **More**. Navigate to **Software Upgrade** and press the **OK** button. Then select **Scan for upgrade** and press **OK** button to check for a new software upgrade.

If a new upgrade is found, it starts to download a warning upgrade. After the download is completed, a warning will be displayed, press **OK** button to complete software upgrade process and restart TV.

### 3 AM search and upgrade mode

Your TV will search for new upgrades at 3:00 o'clock. If **Automatic scanning** option is set to **Enabled** and if the TV is connected to an aerial signal or to internet. If a new software is found and downloaded successfully, it will be installed at the next power on.

**Note:** Do not unplug the power cord while led is blinking during the re-boot process. If the TV fails to come on after the upgrade, unplug, wait for two minutes then plug it back in.

All updates are automatically controlled. If a manual search is carried out, no software is found then this is the current version.

### Troubleshooting & Tips

#### TV will not turn on

Make sure the power cord is plugged in securely to a wall outlet. Press the **Power** button on the TV.

#### Poor picture

- Check if you have correctly tuned the TV.
- Low signal level can cause picture distortion. Please check antenna connections.
- Check if you have entered the correct channel frequency if you have performed manual tuning.

#### No picture

- TV is not receiving any signal. Make sure the correct source has been selected.
- Is the antenna connected properly?

- Is the antenna cable damaged?
- Are suitable plugs used to connect the antenna?
- If you are in doubt, consult your dealer.

#### No sound

- Check if the TV sound is muted. Press the **Mute** button or increase the volume to check.
- Sound may be coming from only one speaker. Check the balance settings from Sound menu.

#### Remote control - no operation

- The batteries may be exhausted. Replace the batteries.
  - The batteries may be inserted incorrectly. Refer to the section "Inserting the Batteries into the Remote".
- No signal on an input source**
- It is possible that no device is connected.
  - Check the AV cables and connections from your device.
  - Check the device is switched on.

- Check the device is switched on.

#### The image is not centered in VGA source

To have your TV automatically center the image, enter the **PC Position** menu in Picture menu, highlight **Auto position** and press **OK**. Wait for it to finish. In order to position the image manually, you should use the **H Position** and **V Position** buttons on the desired option and use Left and Right directional buttons on the remote to set.

#### Recording unavailable

To record a programme, you should first correctly enter the programme to you wish to record. If the TV is switched off, you should check which on the TV is enable recording feature. If you cannot record, check the storage device is correctly formatted and there is sufficient space.

#### USB is too slow

If a "USB disk writing speed too slow to record" message is displayed on the screen while starting a recording, try restarting the recording. If you still get the same error, it is possible that your USB storage device does not meet the speed requirements. Try using a different USB storage device.

#### PC input. Typical Display Modes

The following table is an illustration of some of the typical video display modes. Your TV may not support all resolutions.

Index	Resolution	Frequency
1	640x480	60Hz
2	640x480	75Hz
3	800x600	59Hz
4	800x600	60Hz
5	800x600	72Hz
6	800x600	75Hz

7	1024x768	60Hz
8	1024x768	70Hz
9	1024x768	75Hz
10	1152x864	75Hz
11	1280x768	60Hz
12	1360x768	60Hz
13	1280x860	60Hz
14	1280x1024	60Hz
15	1280x1024	75Hz
16	1400x1050	60Hz
17	1440x900	60Hz
18	1440x900	75Hz
19	1920x1080	60Hz

#### AV and HDMI Signal Compatibility

Source	Supported Signals	Available
Back AV	PAL	O
	SECAM	O
	NTSC4.43	O
	NTSC3.58	O
VpPr	480i, 480p	O
	576i, 576p	O
	720p	O
	1080i	O
HDMI	50Hz, 60Hz	O
	59Hz, 60Hz	O
	480i, 480p	O
	576i, 576p	O
HDMI	720p	O
	1080i	O
	24Hz, 25Hz, 30Hz, 50Hz, 60Hz	O
	1080p	O

(X: Not Available, O: Available)

In some cases a signal on the TV may not be displayed properly. The reason may be an incompatibility with standards from the source equipment (DVD, Set-top box etc.). If you do experience such a problem please contact your dealer and also the manufacturer of the source equipment.

## Supported File Formats for USB Mode

Video File Formats	Video Codec	Max. Resolution & Frame Rate & Bit Rate
mp3, mp3g, .aif, .wv	MPEG1/2, H.264, VC1	
ts, .tp, .m2ts		
avi	MPEG1/2, MPEG4, H.264, MJPEG	
mp4, .m4a, .mkv, .mov, .d1, .3gp, .3gp2, .3gpp	MPEG1/2, H.263, MPEG4, H.264	
mkv	MPEG 1/2, MPEG4, H.264	
ogg, .ogg	Sorenson Sp, MPEG4, H.264	
asf, .wmv	MPEG4, WMV3, VC1	
rm, .rmvb	RV30, RV40	
webm	Vp8, Vp9	
mp4, .mov, .3gp, .3gp, MPEG transport stream, ts, .tp, .ip, .mkv	HEVC/H.265	

**H.264**: 1080P/2/60/ps - 50Mbps, 1080P/60/ps - 50Mbps **Other**: 1080P/60/ps - 50Mbps

## Picture File Formats

Extension	Specification	Resolution (width x height)
.jps, .jpeg	Baseline	8192 x 8192
	Progressive	3000 x 3000
.bmp	RGB 14/16/24/32 bit	
	RLG 4/8 bit	
.gif	87a	
	88a (Only 1 picture at animation format)	
	Grayscale, 24/32 bit per pixel	8192 x 8192
.png	Interlace format	
	Progressive	
.tiff, .tif	Tagged image file format	
.webp	Lossy compression Vp8 key frame version number support 0-3	
	Lossless compression	

## Audio File Formats

Extension	Format
mp3	mp3
aac	aac3
wma	WMA
amr	AMR-NB, AMR-WB
wav	MPEG L4, AAC, PCM
flac	FLAC

## Subtitle File Formats

External Subtitles	Specification
Extension	
.ssa	SubStation Alpha
.ass	Advanced SubStation Alpha
.srt	Subrippler
.sub	Micro DVD / SubViewer
sub + .idx	VOBSUB
.txt	Micro DVD / TMPPlayer / MPL2
.mpl	MPL2
.sml	SamI
.jss	JACOSUB
.ttml	TTML
.txt / .sub	DVDSUBTITLE
.lit	-

Internal Subtitles	Specification
Extension	
.mkv	VOBSUB
.mkv	ASS / SSA / TEXT
.dat, .mpg, .mpeg, .web	DVD Subtitle
.mp4	DVD Subtitle, TEXT

## Supported DVI Resolutions


When connecting devices to your TV's connectors by using DVI converter cable(DVI to HDMI cable - not supplied), you can refer to the following resolution information.

	59Hz	60Hz	68Hz	70Hz	72Hz	78Hz
640x480				X		
640x480		X	X		X	X
800x600	X		X	X		X
832x624					X	X
1024x768		X	X	X	X	X
1152x864		X	X	X		X
1152x870					X	X
1280x768		X				X
1360x768		X				X
1280x960		X	X			X
1280x1024		X				X
1400x1050		X	X			X
1440x900		X				X
1600x1200		X				X
1680x1080		X				X
1920x1080		X				X

## Connectivity

### To Connect to a Wired Network


- You must have a modem/router connected to an active broadband connection.
- Connect your TV to your modem/router via an Ethernet cable. There is a LAN port at the rear (back) of your TV.

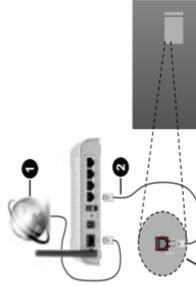

- Broadband ISP connection
- LAN (Ethernet) cable
- LAN input on the rear side of the TV

To configure wired settings refer to the Network section in the Settings menu.

- You might be able to connect your TV to your LAN depending on your network's configuration. In such a case, use an Ethernet cable to connect your TV directly to the network wall outlet.

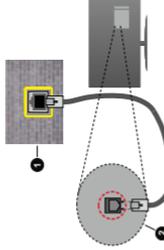

- Network wall socket
- LAN input on the rear side of the TV

### Configuring Wired Device Settings

#### Network Type

The **Network Type** can be selected as **Wired Device**, **Wired Device or Disabled**, in accordance with the active connection to the TV set. Select this as **Wired Device** if you are connecting via an Ethernet cable.

## Internet Speed Test

Highlight **Internet Speed Test** and press the **OK** button. TV will check the internet connection bandwidth and display the result when complete.

### Advanced Settings

Highlight **Advanced Settings** and press the **OK** button. On the next screen you can change the IP and DNS settings of the TV. Highlight the desired one and press **Left** or **Right** button to change the setting from **Automatic** to **Manual**. Now you can enter the IP and / or DNS values manually. Select the related item in the drop down menu and enter the new values using the numeric buttons of the remote. Highlight **Save** and press the **OK** button to save settings when complete.

### Wireless Connectivity

#### To Connect to a Wireless Network

The TV cannot connect to the networks with a hidden SSID. To make your modem's SSID visible, you should change your SSID settings via the modem's software.



- Broadband ISP connection

A Wireless-N router (IEEE 802.11a/b/g/n) with simultaneous 2.4 and 5 GHz bands is designed to increase bandwidth. These are optimized for smoother and faster HD video streaming, file transfers and wireless gaming.

- The frequency and channel differ depending on the area.
- The transmission speed differs depending on the distance and number of obstructions between the transmission products, the configuration of these products, the radio wave conditions, the line traffic and the products that you use. The transmission may also be cut off or may get disconnected depending on the radio wave conditions. DECT phones or any other WLAN 11b appliances. The standard values of the transmission speed are the theoretical maximum values for the wireless standards. They are not the actual speeds of data transmission.

- The location where the transmission is most effective differs depending on the usage environment.
- The Wireless feature of the TV supports 802.11 a,b,g & n type modems. It is highly recommended that you should use the IEEE 802.11n communication protocol in order to avoid any possible problems while watching videos.

- You must change your modem's SSID when there are any other modems around with the same SSID. You can encounter connection problems otherwise. Use a wireless connection if you experience problems with a wireless connection.

**Configuring Wireless Device Settings**  
 Open the **Network** menu and select **Network Type as Wireless Device** to start connection process.

**Highlight Scan Wireless Networks** option and press **OK** to start the search for wireless networks.  
 All found networks will be listed. Highlight the desired network from the list and press **OK** to connect to network with hidden SSID can not be detected by other devices. If you want to connect to a network with hidden SSID, scroll down the list of detected wireless networks, highlight the **Add New Network** option and press **OK**. Enter the name of the network and select the security type using the related options to connect.  
**Note:** If the modem supports *N* mode, you should set *N* mode settings.

If the selected network is password-protected, enter the correct key by using the virtual keyboard. You can use this keyboard via the directional buttons and the **OK** button on the remote control.

Wait until the IP address is shown on the screen. This means that the connection is now established. To disconnect from a wireless network, highlight **Network Type** and press **Left** or **Right** buttons to set as **Disabled**.

If your router has WPS, you can directly connect to the modem/router without entering a password or adding the network first. Highlight **Press WPS on your wireless router** option and press **OK**. Go to your modem/router option and press **OK**. Go to your IP address and press **OK**. You will see a connection confirmation on your TV once the devices have paired. Select **OK** to proceed. No further configuration is required.  
**Highlight Internet Speed Test** and press the **OK** button to check your internet connection speed. Highlight to check your internet connection speed. **OK** button open the advanced setting menu. Use directional and numeric buttons to set. Highlight **Save** and press the **OK** button to save settings when complete.

#### Other information

The status of the connection will be displayed as **Connected** or **Not Connected** and the current IP address, if a connection is established.

#### Connecting to your mobile device via WLAN

If your mobile device has WLAN feature, you can connect it to your TV via a router, in order to access the content in your device. For this, your mobile device must have an appropriate sharing software. Connect your TV to your router following the steps mentioned in the sections above.

Afterwards, connect your mobile device to the router and then activate the sharing software on your mobile device. Then, select files that you want to share with your TV.

If the connection is established correctly, you will be able to access the shared files installed on your mobile device via the **Audio Video Sharing** feature of your TV.

Highlight the **Audio Video Sharing** option in the **Sources** menu and press **OK**, available media server mobile device will be displayed. Select your mobile device and press the **OK** button to continue. If available, you can download a virtual remote controller application from the server of your mobile device application provider.

**Note:** This feature may not be supported on all mobile devices.

#### Wake On

Wake-on-LAN (WoL) and Wake-on-Wireless LAN (WoWLAN) are standards that allow a device to be turned on or woken up by a network message. The message is sent to the device by a program executed on a remote device connected to the same local area network, such as a smartphone.

Your TV is WoL and WoWLAN compatible. This feature might be disabled during the First Time Installation process. To enable this feature set the **Wake On** option in the **Network** menu as **On**. It is necessary that both the device, from which the network message will be sent to the TV, and the TV are connected to the same network. Wake On feature is only supported for Android OS devices and can only be used via YouTube and Netflix applications.

In order to use this feature the TV and the remote device should be connected at least once while the TV is on. If the TV is powered off, the connection should be re-established, the next time it is switched on. Otherwise this feature will be unavailable. This does not apply when the TV is switched into the standby mode.

The performance of some devices in the market, may vary due to the software architecture. In order to use Wake On feature with a better performance, please make sure that your device has latest firmware version. If you want your TV to consume less power in standby mode, you can disable this feature by setting the **Wake On** option as **Off**.

#### Wireless Display

Wireless Display is a standard for streaming video and sound content. This feature provides the ability to use your TV as wireless display device.

#### Using with mobile devices

There are different standards which enable sharing of screens including graphical, video and audio content between your mobile device and TV.

Plug the wireless USB dongle to TV first. If the TV doesn't have internal WLAN feature.

Then press the **Source** button on the remote and switch to **Wireless Display** source.

A screen appears stating that the TV is ready for connection.

Open the sharing application on your mobile device. These applications are named differently for each brand, refer to the instruction manual of your mobile device for detailed information.

Scan for devices. After you select your TV and connect, the screen of your device will be displayed on your TV.  
**Note:** This feature can be used only if the mobile device supports this feature. If you experience problems with connection, check if the operating system version you use is the same as the operating system version with the production of this TV. Scanning and connecting processes differ according to the programme you use.

#### Connectivity Troubleshooting

##### Wireless Network Not Available

- Ensure that any firewalls of your network allow the TV wireless connection.
- Try searching for wireless networks again, using the **Network** menu screen.

If the wireless network does not function properly, try using the wired network in your home. Refer to the **Wired Connectivity** section for more information on the process.

If the TV does not function using the wired connection, check the modem (router). If the router does not have a problem, check the internet connection of your modem.

##### Connection is Slow

See the instruction book of your wireless modem to get information on the internal service area, connection speed, signal quality and other settings. You need to have a high speed connection for your modem.

##### Disruption during playback or slow reactions

You could try the following in such a case:  
 Keep at least three meters distance from microcave any events, mobile telephones, bluetooth devices or any other WLAN compatible devices. Try changing the active channel on the WLAN router.

#### Internet Connection Not Available / Audio Video Sharing Not Working

If the MAC address (a unique identifier number) of your PC or modem has been permanently registered, it is possible that your TV might not connect to the internet. In such a case, the MAC address is authenticated each time when you connect to the internet. This is a precaution against unauthorized access. Since your TV has its own MAC address, your internet server may not be able to connect to the TV. For this, you should change the MAC address to the TV. Contact your internet service provider and request information on how to connect a different device, such as your TV, to the internet.

It is also possible that the connection may not be available due to a firewall problem. If you think this occurs your problem, contact your internet service provider. Alternatively, the reason may be connectivity problem. For this, you should use the TV's Audio Video Sharing mode or while browsing via Audio Video Sharing feature.

#### Invalid Domain

Ensure that you have already logged on to your PC with an authorized username/password and also ensure that your domain is active, prior to sharing any files in your media server program on your PC. If the domain is invalid, this might cause problems while browsing files in Audio Video Sharing mode.

#### Using Audio Video Sharing Network Service

Audio Video Sharing feature uses a standard that eases the viewing process of digital electronics and makes them more convenient to use on a home network.

This standard allows you to view and play photos, music and videos stored in the media server connected to your home network.

##### 1. Server Software Installation

Audio Video Sharing feature cannot be used if the server programme is not installed onto your PC or if the required media server software is not installed onto the companion device. Prepare your PC with a proper server programme.

##### 2. Connect to a Wired or Wireless Network

See the **Wired/Wireless Connectivity** chapters for detailed configuration information.

##### 3. Enable Audio Video Sharing

Enter the **Settings>Systems-More** menu and

enable the **Audio Video Sharing** option.

##### 4. Play Shared Files via Media Browser

Highlight the **Audio Video Sharing** option in the **Sources** menu by using the directional buttons and press **OK**. Available media server devices in the network will be listed. Select one and press **OK** to continue. The media browser will then be displayed.

Refer to the **Media Browser** menu section for further information on file playback.

If a problem occurs with the network, switch your television off at the wall socket and back on again. Flick mouse and jump are not supported with the Audio Video Sharing feature.

PC/HDD/Media Player or any other devices that are compatible should be used with a wired connection for higher playback quality.

Use a LAN connection for quicker file sharing between other devices like computers.

**Note:** There may be some PCs which may not be able to utilize the Audio Video Sharing feature due to administrator and security settings (such as business PCs).

### Apps

You can access the applications installed on your TV from the **Home** menu. Press the **Menu** button on the remote. **Home** menu will be displayed. Highlight an app and press **OK** to launch.

In order to manage the apps installed on your TV, you can use the **More Apps** option in the TV menu. You can add an installed app to **Home** menu, launch or remove it. Highlight an app and press **OK** to see the available options.

You can add new apps from the application market. To access the market, highlight the **Market** option in the TV menu and press **OK**. Available apps will be displayed. You can also access the application market from within the **More Apps** menu.

You can reset your customisations on the **Home** menu, including app-related ones, to defaults using the **Reset Apps** option in the TV menu (availability depends on TV model and its features). Highlight this option and press **OK**. A confirmation message will be displayed. Highlight **Yes** and press **OK** to proceed. Note that you will not be able to perform this operation again within the next few minutes.

### Notes:

Possible application dependent problems may be caused by the content service provider.

Your party internet services may change, be discontinued or restricted at any time.

### Freeview Play Platform

Freeview Play platform provides catch-up TV and On Demand services. Simply press the **Freeview Play** button on your remote control to connect to the Freeview Play platform.

The Freeview Play platform can also be accessed from the **Home** and **More Apps** menus. Press **Menu** button and select **Home** or **Apps**. Then highlight **Freeview Play** and press the **OK** button.

You will have to agree to the terms and conditions for Freeview Play services first if you did not agree them

during the **First Time Installation**. Highlight **Yes** and press **OK** on the remote to confirm and proceed.

Integrated TV Player applications will be displayed. Select one and press the **OK** button. Then select a content that you want to play back and press the **OK** button to watch.

Catch-up contents can also be accessed and played back directly from the TV Guide. Refer to the section **Electronic Programme Guide** for more information.

### Requirements

The Freeview Play services may only be used if the following requirements are fulfilled:

- Connecting the TV to the internet. A minimum broadband speed of 2Mbps is required for proper operation of catch-up and on demand services.
- Agreeing to the terms and conditions of Freeview Play

**Note:** Freeview Play platform usage will count towards any monthly broadband data allowance. Only selected channels provide 7-day catch up.

### Internet Browser

To use the internet browser, enter the **Home** menu first. Then launch the internet browser application which has an orange coloured logo with earth symbol on it. In the initial screen of the browser, the thumbnails of the predefined (if any) links to web sites available will be displayed as **Speed Dial** options along with the **Edit Speed Dial** and the **Add to Speed Dial** options.

To navigate the web browser, use the directional buttons on the remote or a connected mouse. To see the browser options, move the cursor to the top of the browser. **Home**, **High Tabs** and **Bookmarks** are the browser bar which contains previous/next buttons, the refresh button, the address/search bar, the **Speed Dial** and the **Viewed** buttons are available.

To add a desired website to the **Speed Dial** list for quick access, move the cursor to the top of the page or press the **Speed Dial** button will appear. Highlight the **Speed Dial**

button and press the **OK** button. Then select **Add to Speed Dial** option and press the **OK** button. The list will fill in with the site name and address. Highlight the site you wish to add to the **Speed Dial** list. Highlight the **Viewed** button to add. While highlighting the site you wish to add to the **Speed Dial** list, then highlight **Add to Speed Dial** option in the submenu and press the **OK** button again. **Name** and **Address** will be filled automatically according to the site you are visiting. Highlight **OK** and press the **OK** button to add.

You can also use the **Viewed** menu options to manage the list. Highlight the **Viewed** button and press the **OK** button to see available page specific and general options.

There are various ways to search or visit websites using the web browser.

Enter the address of a website (URL) into the search/address bar and highlight the **Enter** button on the virtual keyboard and press the **OK** button to visit the site.

Enter keywords into the search/address bar and highlight the **Enter** button on the virtual keyboard and press the **OK** button to start a search for the related websites.

Highlight a **Speed Dial** thumbnail and press the **OK** button to visit the related website.

Your TV is compatible with USB mice. Plug your mouse or wireless mouse adaptor into the USB input of your TV for easier and quicker navigation.

Some web pages include flash content. These are not supported by the browser.

Your TV does not support any download processes from the internet via the browser.

All sites on the internet might not be supported. According to the site, content problems may occur. In some circumstances video contents might not be able to be played.

### HBTV System

**HBTV (Hybrid Broadcast Broadband TV)** is a new industry standard that seamlessly combines TV services delivered via broadcast with services delivered via broadband and also enables access to internet only services for consumers using connected TVs and set-top boxes. Services delivered through HBTV include traditional broadcast TV channels, catch-up services, video-on-demand, electronic programme guide, interactive advertising, personalisation, voting, games, social networking and other multimedia applications. HBTV applications are available on channels where they are approved by the broadcaster. The broadcaster marks one application as 'autostart' and this one is started by the platform automatically. The autostart applications are generally launched with a small red button icon to notify the user that there is an HBTV application on that channel. Press the red button to open the application page. After the page is displayed you can go back to the initial red button icon state by pressing the red button again. You can toggle between the red button icon mode and full UI mode. It should be noted that the red button switching capability is provided by application and some applications may have different colours (e.g. yellow, blue, red, green, yellow, blue may be defined for some other functions, e.g. shortcuts).

If you switch to another channel while an HBTV application is active (either in red button icon mode or full UI mode), the following scenarios can occur.

- The application can continue running.
- The application can be terminated.

The application can be terminated and another autostart red button application can be launched.

HBTV allows the applications to be retrieved both on broadband or broadcast. The broadcaster may enable both ways or one of them. If the platform does not have an operational broadband connection, the platform can still launch applications transmitted on broadcast. The autostart red button applications generally provide links to other applications. The user then can switch to other applications by using the links provided. The applications should provide a way to terminate themselves, usually **Exit** button is used for this.

HBTV applications use keys on the remote control to interact with the user. When an HBTV application is launched, the control of some keys are owned by the application. For example, numeric channel selection may not work on a teletext application where the numbers indicate teletext pages.

HBTV requires AV streaming capability for the platform. There are numerous applications providing VOD (video on demand) and catch-up TV services. The user can use play, pause, stop, forward, and rewind keys on the remote control to interact with the AV content.

**Note:** You can enable or disable this feature from the **Privacy Settings** menu in **Settings-System** menu.

### Smart Center

**Smart Center** is a mobile application running on iOS and Android platforms. With your tablet or phone, you can easily stream your favourite live shows, programmes from your smart TV. Also, you can launch your applications, use your tablet as a remote control for your TV and share media files.

**Note:** Being able to use all functions of this application depends on the features of your TV.

### Getting Started

To be able to use internet based features, your modem/router must be connected to the internet.

**IMPORTANT:** Make sure the TV and mobile device are connected to the same network.

For media sharing feature **Audio Video Sharing** option should be enabled (if available). Press the **Menu** button on the remote, select **Settings-System-More** menu and press **OK**. Highlight **Audio Video Sharing** and change as **Enabled**. Your TV is ready to connect to your mobile device now.

Install the **Smart Center** application onto your mobile device.

Start the **Smart Center** application. If all connections are configured properly, you will see your TV's name on your mobile device. If your TV's name doesn't appear on the list, wait a while and tap on the **Refresh** widget. Select your TV from the list.

## Mobile Device screen

On the main screen you can find tabs to access various features.

The application retrieves actual channel list from TV first when it starts.

**MY CHANNELS:** The programmes of first four channels from the channel list retrieved from the TV are shown. You can change the listed channels. Press on the channel thumbnail and hold. A list of channels will be displayed and you can choose your desired channel to be replaced.

**TV:** You can watch content through the TV tab. In this mode you can navigate through the channel list retrieved from your TV and click on thumbnails to view the detail pages.

**RECORDINGS:** You can view your active recordings (if available) and reminders through this tab. To delete a file, simply press on the delete icon found on each row.

**EPG** (Electronic programme guide): You can view the broadcast schedules of selected channel lists through this tab. You can also navigate through channels by pressing on the selected channel on the EPG grid. Please note that updating / refreshing the EPG information may take a while depending on your network and web service quality.

**Note:** Internet connection is required for WEB based EPG information.

**SETTINGS:** Configure the application to your liking. You can change:

**Auto-lock (Only in iOS):** The screen of the device automatically turns off after a certain amount of time. Default is off, which means the screen will always stay on.

**Auto-enable FollowMeTV:** FollowMeTV function (if available) will start automatically when this setting is enabled. Default is disabled.

**Auto-connection to TV:** When enabled, to last mobile device will automatically connect to last connected TV and skips the TV search screen.

**Change TV (Only in iOS):** Shows the currently connected TV. You can press on this setting to go to the TV search screen and change to a different TV.  
**Edit custom channel list:** You can edit your custom channel list using this setting.

**Choose channel list source:** You can choose the channel list source to be used in the application. The options are 'TV List' and 'Custom List'. Additionally you can activate 'Remember my choice' option to set the selected channel list source as a constant choice. In this case if the selected source is available it will be used in the application.

**Version No:** Displays the current version of the application.

## Detail Page

To open detail page tap on a programme. On the detail page screen you can get detailed information of the programmes you select. There are 'Details', 'Cast&Crew' and 'Videos' tabs to find on this page.

**DETAILS:** This tab provides summary and information about the selected programme. Also there are links to Facebook and Twitter pages of the programme selected.

**CAST&CREW:** Shows all the people contributed to the current programme.

**VIDEOS:** Provides videos on YouTube related to the selected programme.

**Note:** For some functions an internet connection may be required.

## FollowMe TV Feature (if available)

Tap on the **FOLLOW ME TV** widget located at the bottom left of the screen of your mobile device to change the layout for **FollowMe TV** feature.

Tap the play icon to start streaming of the content from the TV to your mobile device. Available if your device is in your routers operation range.

## Mirror Mode

This mode of FollowMe TV feature is enabled by default and allows streaming the content from any other selected TV sources and Media Browser.

## Notes:

**Note:** Not only digital (DVB-T/C/S) SD and HD channels are supported.  
**Multi-language audio support and subtitle on/off features are not functional.**

**The streaming performance may change depending on the quality of your connection.**

## Media Share Page

To access the **Media Share** widget tap on the **Up-arrow** on the bottom left side of this screen.

If the Media Share widget is pressed, a screen is displayed where you can select the media file type to share with your TV.

**Note:** Not all image file formats are supported. This function will not work if Audio Video Sharing feature is not supported.

## Smart Remote Feature

You can use your mobile device as a remote control for your TV. Once it has connected to the TV. To use smart remote's full features tap on the **Up-arrow** on the bottom left side of the screen.

## Voice Recognition

You can tap on the **Microphone** widget and manage your application, giving voice commands such as 'Volume Up/Down', 'Programme Up/Down'.

**Note:** This feature is only for android based devices available.

## Keyboard Page

The keyboard page can be opened in two ways; by pressing the **Keyboard** widget on the application screen or automatically by receiving a command from the TV.

## Requirements

1. Smart TV
2. Network connection
3. Mobile Device based on Android or iOS platform (Android OS 4.0 or higher; iOS 6 or higher version)
4. Smart Center app (to be found on online application stores based on Android and iOS platforms)
5. Router module
6. USB storage device in FAT32 format (required for USB Recording feature, if available)

**Note:** For Android devices, Normal (mp3), Large (mp3) and Extra Large (mp3) screen sizes are supported. Devices with 3" or smaller screen sizes are not supported.

For iOS devices, all screen sizes are supported

**User interface of the Smart Center application is subject to change depending to version/installation of your device.**

## Alexa Ready

Alexa is Amazon's cloud-based voice service available on many voice controlled assistant devices. By means of the Alexa built-in and Works With Alexa features you can use your TV as an Alexa device and control the functions of your TV with Alexa.

## Alexa Built-in

You can use your TV as an Alexa device. In order to do this, a Microphone Box<sup>(\*)</sup> will be required. After connecting your Microphone Box to your TV the setup process should be completed. The setup can be carried out in the ways described below.

**(\*) The Microphone Box can be purchased separately if not supplied with the unit. For more information contact your local dealer or retail outlet where you bought your TV.**

- Connect your Microphone Box to your TV
- Use the **Alexa Built-in** option in the **Settings-System-Voice Assistant** menu

Carry out first time installation on your TV. The setup wizard will be displayed after the installation process is completed

The wizard will guide you through the setup process. Refer to the user manual of the Microphone Box for detailed information.

## Works With Alexa

You can control the functions of your TV with Alexa. In order to do this, the setup process should be completed. The setup can be carried out in the ways described below.

- Use the **Works With Alexa** option in the **Settings-System-Voice Assistant** menu
- Carry out first time installation on your TV. The setup wizard will be displayed after the installation process is completed

## Setup process

The wizard will guide you through the setup process.  
• If you carry out first time installation on your TV, the Alexa setup wizard will be displayed after the installation process is completed. On the first screen highlight **Learn More** option and press **OK**. On the next screen you will be informed about the feature. Highlight **Start** and press **OK** to proceed.

If you skip the setup wizard after the first time installation you can use the **Works With Alexa** option in the **Settings-System-Voice Assistant** menu to carry out the setup later manually. On the first screen you will be informed about the feature. Highlight **Start** and press **OK** to proceed.

• An authentication code will be created and displayed on the screen. Use your computer or any other device with internet access to go to the internet address (URL) shown on the screen. You will be directed to a page where you can sign in to your Amazon account first. If you are not already signed in. Then you will be directed to a page where you can enter the authentication code you see on the TV and link your TV to your Amazon account.

• If the linking process was successful you will be asked to determine a name for your TV, called 'Friendly Name (FN)'. A 'Friendly Name' is a name that reminds you of your TV, such as 'Living Room TV', 'Kitchen TV', 'Dining Room TV', etc. Choose an easy-to-remember name. You will say this name to let Alexa which TV to control. When you are done, highlight **OK** and press **OK**.

• Explained about the use of the feature will be displayed on the next screen. Press **OK** to finish the setup.

You carried out the setup after the first time installation you will return to the first screen of the setup wizard when you press **OK**. In that case press **Exit** or highlight **Setup Later** and press **OK** in order to exit the setup.

Once the setup is complete, you will be able to control the functions of your TV with Alexa.

**Note:** Make sure that the devices are connected to the internet.

## Example Commands

Here are some voice commands that you can use:

Command	Function
Alexa, turn on FN	Powers on the TV
Alexa, turn off FN	Powers off the TV
Alexa, play FN	Starts media playback
Alexa, pause FN	Pauses media playback
Alexa, resume FN	Resumes media playback
Alexa, stop FN	Stops media playback
Alexa, first forward on FN	Advances media in fast forward mode
Alexa, rewind on FN	Reverts media
Alexa, set the volume of FN to 50	Sets the volume to the specified level
Alexa, turn the volume up on FN	Increases volume by 10 units
Alexa, turn the volume down on FN	Decreases volume by 10 units
Alexa, mute FN	Mutes sound
Alexa, unmute FN	Unmutes sound
Alexa, change the input to "input_name" on FN	The TV switches to the input source with the specified name (e.g., HDMI 1)
Alexa, change channel to "channel_number" on FN	The TV switches to the channel with the specified number (e.g., channel 200)
Command	Function
Alexa, change channel to "channel_name" on FN	The TV switches to the channel with the specified name
Alexa, channel up on FN	The TV switches to the next higher channel, if any available
Alexa, channel down on FN	The TV switches to the next lower channel, if any available
Alexa, next channel on FN	The TV switches to the next channel on the channel list

**FN** is the abbreviation for 'Friendly Name'.

## Google Assistant

Your TV works with Hey Google for voice control of your connected devices and appliances.

### Works With Hey Google

By means of this feature you can control the functions of your TV with Google Assistant devices. In order to do this, the setup process should be completed.

### Before the setup

Complete the following procedures before you start the setup on your TV.

- Install the Google Home application on your mobile phone and login to your account
- Add the assistant device to your account
- Select the **Varnart TV** action from the list of actions within the application
- A screen will be displayed where you will enter the authentication code which will be created during the setup process on your TV in order to link your TV to your account. Continue with the setup on your TV to get the authentication code

### Setup process

The setup can be carried out by using the **Google Assistant** option in the **Settings->System->Voice Assistant** menu. The Wizard will guide you through the setup process.

- On the first screen highlight **Start** and press **OK** to proceed
  - You will be asked to determine a name for your TV on the next screen, called 'Friendly Name' (FN). A 'Friendly Name' is a name that reminds you of your TV, such as 'Living Room TV', 'Kitchen TV', 'Dining Room TV', etc. Choose an easy-to-say name. When you are done, highlight **OK** and press **OK**
  - An authentication code will be created and displayed on the screen. Enter the code you see on the TV on the Google Home application
- Once the setup is complete, you will be able to control the functions of your TV with Google Assistant.
- Note:** Make sure that the devices are connected to the internet. You can link only one TV to your account.

## Example Commands

Just say "Hey Google" to control your TV using just your voice.

Command	Function
turn on FN	Powers on the TV
turn off FN	Powers off the TV
pause on FN	Pauses media playback
resume on FN	Resumes media playback
stop on FN	Stops media playback
volume up on FN	Increases volume
volume down on FN	Decreases volume
set mute volume on FN	Mutes sound
switch input to "input_name" on FN	The TV switches to the input source with the specified name (e.g., HDMI 1)
change channel to "channel_number" on FN	The TV switches to the channel with the specified number (e.g., channel 200)
change channel to "channel_name" on FN	The TV switches to the channel with the specified name
channel up on FN	The TV switches to the next higher channel, if any available
channel down on FN	The TV switches to the next lower channel, if any available

**FN** is the abbreviation for 'Friendly Name'.

Google is a trademark of Google LLC.

## DVB functionality information

This DVB receiver is only suitable for use in the country which it was designed to be used in.


Although this DVB receiver conforms to the latest DVB specifications at the time of manufacture, we cannot guarantee compatibility with future DVB transmissions due to changes that may be implemented in broadcast signals and technologies.

Some digital television functions may not be available in all countries.

We continually strive to improve our products; therefore, specifications may change without prior notice.

For advice on where to purchase accessories, please contact the store where you purchased your equipment.

VESA WALL MOUNT MEASUREMENTS			
Hole Pattern Sizes (mm)	W	H	
	200	200	
Screw Sizes			
Length (X)	min. (mm)	10	
	max. (mm)	13	
Thread (Y)	M6		

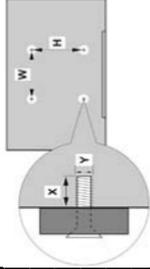

Product Fiche	
Commercial Brand: Walker	
Product No.	10131356
Model No.	39WPS21
Energy efficiency class	A+
Visible screen size (diagonal, approx.) (inch/cm)	39 inches / 98 cm
On mode average power consumption (Watt)	44,0
Annual energy consumption (kWh/annum) (*)	64
Standby power consumption (Watt)	0,50
Off mode power consumption (Watt)	N/A
Display resolution (px)	1366x768

(\*) Energy consumption kWh per year, based on the power consumption of the television operating 4 hours per day for 365 days. The actual energy consumption will depend on how the television is used.

Hereby, VESTEL Elektronik Sanayi ve Ticaret A.Ş., declares that the radio equipment type TFT IDTV is in compliance with Directive 2014/53/EU. The full text of the EU declaration of conformity is available at the following internet address: doc.vosshub.com





# WALKER

Glen Dimplex Ireland, Airport Road, Cloghran, Co. Dublin  
IRELAND K67DT89



50559678