



**Instruction Manual
Refrigerator-Freezer**

BAFF504SS

CONTENTS

| | |
|----------------------------------------------|---------|
| ■ Safety Warnings | 001 |
| ■ Electrical Safety | 002 |
| ■ Transportation and Handling | 002 |
| ■ Installing and Switching on Your Appliance | 002 |
| ■ Before Switching On | 003 |
| ■ Door Height Adjustment | 003 |
| ■ Your Appliance and the Compartments | 004 |
| ■ Usage Information | 005~011 |
| Control panel | 005 |
| Shelving and rack adjustment | 011 |
| Bulb Replacement | 011 |
| ■ Energy Saving Advice | 012 |
| ■ Freezer Storage Advice | 012 |
| ■ Power Failure | 012 |
| ■ Maintenance & Cleaning | 013 |
| Internal Cleaning | 013 |
| External Cleaning | 013 |
| When the appliance is not in use | 013 |
| Defrosting | 013 |
| ■ Trouble shooting | 014~015 |

Safety warnings

Important note: Please read this booklet before installing and switching on this appliance. The manufacturer assumes no responsibility for incorrect installation and usage as described in this booklet.

- This model uses natural refrigerant gas as part of its cooling system. This gas is known as R600a (Isobutene) and is environmentally friendly but can be combustible. Care should therefore be taken when handling or transporting the product to ensure that none of the refrigeration circuit components are damaged,
- Do not obstruct ventilation openings in the appliance.
- The appliance must not be placed or rested on its power cord.
- Do not use mechanical devices or other artificial means to accelerate the defrosting process, such as a heater or a hair dryer.
- Do not use electrical appliances in the refrigerator compartment of the appliance.
- If this appliance is to replace an old refrigerator with a lock, the lock must be removed as a safety measure before storing it or disposing of it. This is to protect children from locking themselves inside the appliance.
- Old refrigerators and freezers contain insulation gases and refrigerant, they must be disposed of properly. Contact your local authority or your dealer if you have any questions. Please ensure that you do not damage the scrap unit prior to being picked-up by the relevant waste disposal service.
- Do not use adaptors or extension leads when connecting the appliance to the electrical power supply.
- Do not plug in damaged plugs.
- Do not pull, twist or damage the power cable.
- Do not plug-in or un-plug the appliance with wet hands to prevent electrical shock.
- This appliance can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved. Children should not play with the appliance.
- This appliance is designed to be used by adults, do not allow children to play with the appliance or let them hang over the door.
- Do not place explosive or flammable material in your appliance for your own safety.
- Bottles containing a high percentage of alcohol must be sealed well and placed vertically in the refrigerator.
- Do not cover the body or the top of the appliance.
- Fix down the accessories in the appliance during transportation to prevent damage to them.

Electrical Safety

THIS APPLIANCE MUST BE PLUGGED INTO AN EARTHED SOCKET

- Before switching on, make sure that the voltage of your electricity supply is the same as that indicated on the rating plate. This product is designed to operate on 220 –240V AC; 50Hz. Connection to any other power source may damage the unit.
- This product may be fitted with a non re-wireable plug. If it is necessary to change the fuse in the plug, the fuse cover must be refitted. If the fuse cover becomes lost or damaged, the plug must not be used until a suitable replacement is obtained.
- If the plug has to be changed because it is not suitable for your socket, or becomes damaged in any way, it should be cut off and an appropriate plug fitted following the wiring instructions. This should be carried out by a qualified electrician. The plug removed must be disposed of safely, as insertion into a 13 Amp socket is likely to cause an electrical hazard.


Transportation and Handling

For safe lifting, tilt the appliance backwards by no more than 45 degrees, hold the base and rear corners of cabinet. Lift the refrigerator carefully. Never use the door handles for lifting. To move the refrigerator on a flat level surface, tilt it slightly backwards and push backwards.

This unit is heavy and could cause injury –ensure there are adequate people present to move the appliance.

Installing and Switching on Your Appliance

- Operating voltage for your appliance is 220-240V at 50Hz.
- Before plugging in the power supply, ensure that the voltage on the rating label corresponds to the working voltage of your electrical system in your home.
- Insert the plug into an efficient Ground(Earth) connection. If the socket has no Ground(Earth)contact or the plug does not match, we suggest you call an authorised electrician for assistance.
- Place your appliance in an area that is not exposed to direct sunlight.
- Your appliance should be placed at least 10cm away from stoves, ovens and other heating cores.
- This appliance should never be used outdoors or left in the rain.
- When your appliance is placed next to a chest freezer or freezer, there should be at least 10cms between them to prevent humidity on the outer surface.
- If placing your appliance next to kitchen cabinets, ensure that 25 mm of free space is left at both sides, 50 mm at the rear of the unit and 25 mm at the top of the unit.

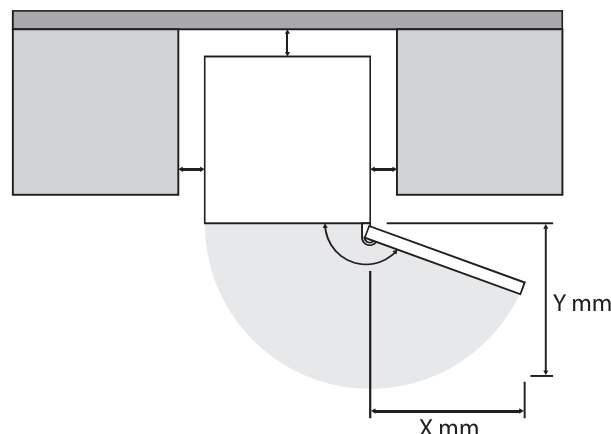

- The appliance must be used in the vertical position and on a flat surface.
- To level the appliance, use the adjustable feet on the appliance.
- Do not place your appliance on a carpeted surface as this will prevent adequate ventilation.
- This appliance should only be placed on a flat, firm surface.
- Choose a dry and well-ventilated space.
- The appliance should be positioned so that the plug is easily accessible.

Before Switching On


- Before using your appliance, add a teaspoon of bicarbonate of soda to warm water and with a damp cloth wipe down all parts of the new appliance, then repeat the process with a clean damp cloth and dry(ensure the appliance is not connected to the power when performing this task).
- Remove all transport tapes and foam protection pieces . Clean the interior with a cloth dampened in lukewarm soap and water. Wipe with clean water and wipe dry.
- There may be an odour when you first switch on the appliance, it will disappear when the appliance starts to cool.
- When the appliance has been positioned, adjust the feet to ensure the unit is stable. This is essential to ensure quiet running and proper door opening / closing.
- Connect to the electrical socket but do not switch the power to the refrigerator on for at least 3 hours. The coolant within the product needs time to settle after it has been transported and put in to position, failure to do this will affect the cooling performance of your appliance.
- Once the appliance has settled switch on the power, the compressor will begin to work. Locate the control panel and set the temperature of the fridge compartment to 4°C and the freezer compartment to -18°C. Close the door
- You may hear faint gurgling or bubbling sounds when the refrigerant is pumped to the cooling system and through the coils or tubing at the rear of the appliance. When the compressor is in operation you may hear a slight whirring sound or pulsating noise. The thermostat controls the operation of the compressor, and you may hear a slight click as it cycles in and out (this is normal).
- To save energy, you should minimize the frequency and duration of door opening.

Door Height Adjustment

If the doors of the appliance are not aligned then the height of them can be adjusted, if required please follow the below steps.

Note: The maximum height adjustment is 5mm

Rotate the locking nut clockwise (as shown in the diagram below) with a wrench for 2 full rotations to loosen it. You can now rotate the adjusting nut(as shown in diagram below) to raise or lower the height of the door. Once the door is set to your desired position, then tighten the locking nut by rotating it anti-clockwise.

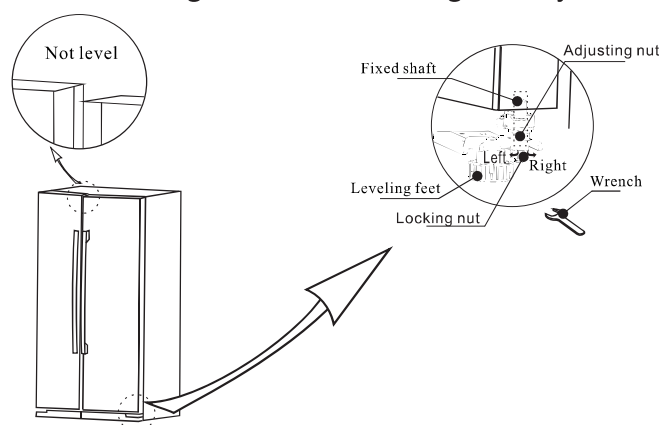


When the fridge door is low:

Open the door, use a wrench to rotate the adjusting nut anti-clockwise to raise the height of the door. Once the doors are aligned, then tighten the locking nut by rotating it clockwise.

When the fridge door is high:

Open the door, use a wrench to rotate the adjusting nut clockwise to lower the height of the door. Once the doors are aligned, then tighten the locking nut by rotating it clockwise.

Your Appliance and the Compartments

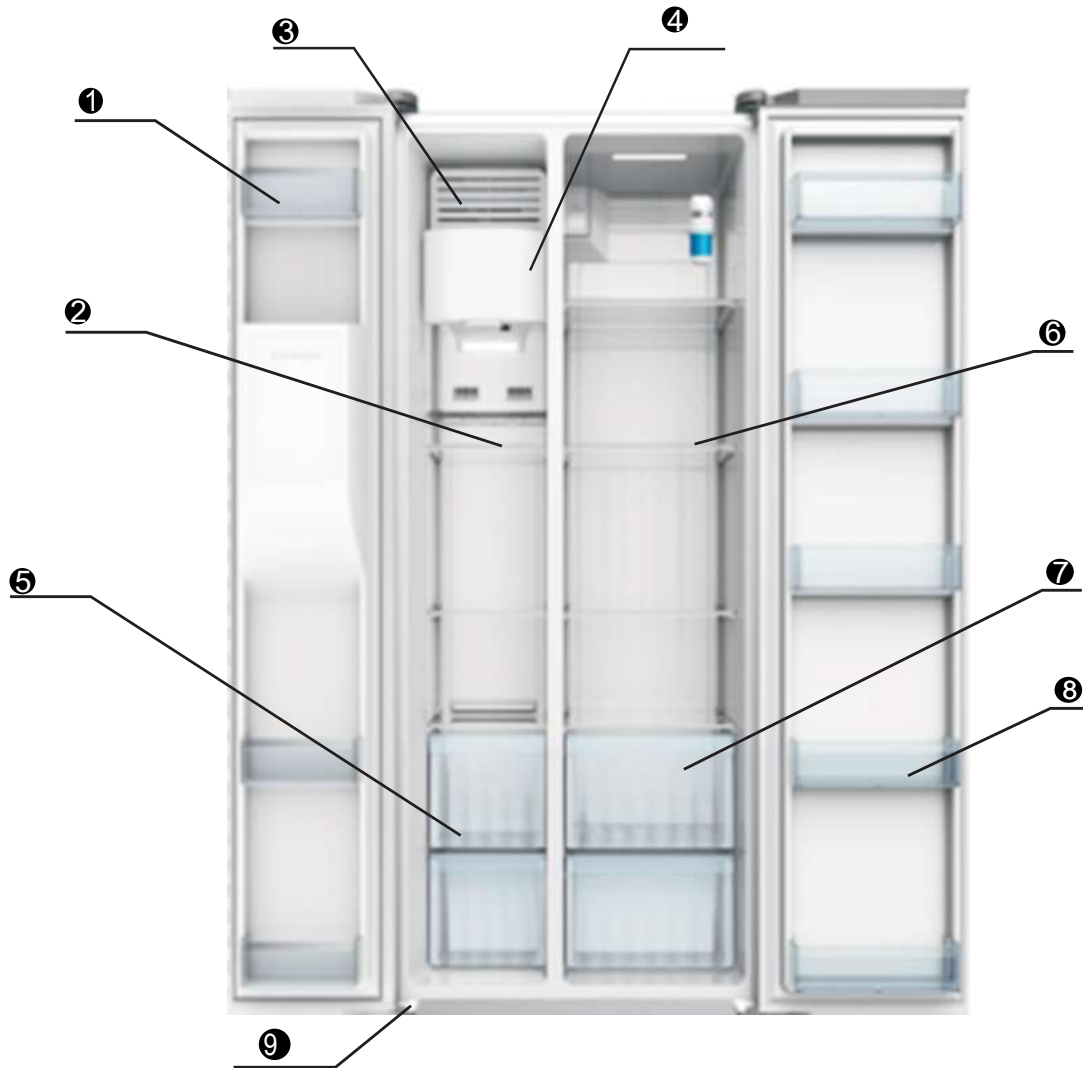










- ① Freezer door rack
- ② Freezer compartment glass shelf
- ③ Ice-maker box
- ④ Ice box
- ⑤ Freezer compartment drawer
- ⑥ Refrigerator compartment glass shelf
- ⑦ Vegetable crisper
- ⑧ Refrigerator door rack
- ⑨ Lower cover








Usage Information

Control panel



| | |
|-------------------------------------------------------------------------------------|--------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
|  | <p>Button - lock/ unlock, long press for 3 seconds to lock or unlock display screen. Except for the button of DISPENSER, operation for other function keys shall be done after the display screen is unlocked.</p> |
|  | <p>Lock/ unlock icons, when the display screen is locked, an icon of a locked lock is shown, and icon of an unlocked lock is shown for unlocked display screen.</p> |
|  | <p>Button - freezing temperature setting, to set temperatures for freezing chamber.</p> |
|  | <p>Display setting temperature of freezing chamber.</p> |
|  | <p>Button - refrigerated storage temperature setting, to set temperatures for refrigerating chamber.</p> |
|  | <p>To display setting temperature of refrigerating chamber.</p> |
|  | <p>Button - mode setting. Modes of “suspension” —> “quick-freezing” —> “quick-cooling + quick-freezing” —> “quick-cooling” —> “cancel” —> “suspension” can be circularly set.</p> |
|  | <p>Icon of quick-freezing, the icon lights when the function of quick-freezing takes effect, otherwise the icon light is off. Setting temperature of freezing chamber for quick-freezing is -24 °C.</p> |
|  | <p>Icon of quick-cooling, the icon lights when the function of quick-cooling takes effect, otherwise the icon light is off. Setting temperature of refrigerating chamber for quick-cooling is 2 °C.</p> |

Usage Information

| | |
|-------------------------------------------------------------------------------------|----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
|  | <p>Icon of suspension, the icon lights when the function of suspension takes effect, otherwise the icon light is off. The “suspension mode” is designed for situations where the refrigerator compartment is not used for a long time, then the cooling system of fridge compartment stops working and the freezing chamber operates at a mid-range temperature of 18 °C automatically. If “suspension mode” is selected, then the suspension icon lights.</p> |
|  | <p>Button - water dispenser, short press option key to select ice cube, crushed ice, cool water or cancel. You can keep pressing the option key until a required type is displayed. Button - resetting filter, long press the button for 3 seconds to start a new period of 6 months (please refer to “replace water filter”). After the filter has been replaced, long press the button for 3 seconds to restart timer function.</p> |
|  | <p>Icon of ice-making function, when the function of ice-making is selected, the icon lights.</p> |
|  | <p>Icon of crushed-ice-making function, when the function of crushed-ice-making is selected, the icon lights.</p> |
|  | <p>Reminder icon for water filter replacement. The reminder icon lights after the filter has worked for 150 days and flickers after it has worked for 180 days to remind users to replace the filter. After the filter is replaced, users should long press resetting button of filter for 3 second to restart timer function.</p> |
|  | <p>Button - Turn off Ice Machine, press the button to set/ cancel ice-making function of the ice machine. When the function of Turn off Ice Machine is selected, the ice machine stops working.</p> |
|  | <p>Icon of Turn off Ice maker, when the ice maker is set to "Off", the icon lights.</p> |

Usage Information

Equipment Preparation

Step 1

A new equipment may smell, please clean the inner chamber of the fridge with warm vinegar water to remove it. Do not use soap or irritating, abrasive, alkaline or solvent cleaning agent.

Appropriate Location



Refrigerant is hazardous!

The refrigeration cycle system of combined fridge-freezers contains environmentally friendly but combustible refrigerant iso-butane (R600a). Only authorized professionals are allowed to carry out servicing to the refrigeration system.

To ensure that no combustible gas mixture will be produced in the event of leakage of cooling agent recycle system, every 8 g cooling agent shall be provided with 1 m³ of installing space as per EN 378 standard. The volume of cooling agent in a combined fridge-freezer is marked on the name plate of type. Do not put heating appliances on a combined fridge-freezer, such as microwaves and toasters, etc. Do not cover the vent. Please do not use any electrical appliance inside a fridge or freezer.

Risk of injury during transportation!

This refrigerator is very heavy.

To avoid injury take care when transporting and seek assistance from another person when moving it.

Damage hazards!

Incorrect use of combined fridge-freezers may cause damage.

This appliance should not be inclined more than 45 degrees during transportation.

Horizontal tilt of combined fridge-freezers shall be avoided as far as possible.

Do not remove the protective films on the fridge doors with sharp tools.

Applicable ambient temperature for combined fridge-freezers is 16 °C to 38 °C.

In order to guarantee minimum energy consumption and realize maximum cooling power, the placement location shall:

- Not be overheated, over-dry but ensure good ventilation.
- Not be exposed to sunlight directly.
- have a space of at least 10 m³.

It should not be placed nearby ovens, stoves or heating installation. Minimum distance between the fridge-freezer with following appliances shall be:

- Electric stove: 10 cm.
- Oil stove and coal stove: 10 cm.
- cooling device: 10 cm.
- Washing machine/ dish-washing machine: 10 cm.
- wall: 10 cm.

If above distances cannot be guaranteed, a thermal baffle shall be provided between them. If geothermal equipment is installed within the place where combined fridge-freezer is placed, then a thermal baffle made of robust materials shall be provided under the combined fridge-freezer.

Usage Information

Connection to Water Supply



Water hazards!

The water pressure of combined fridge-freezers is 2 - 7 bars. If water pressure is too high, please install a decompressor.



Please consult your local water authority or a professional, to determine your water pressure.

Do not connect this appliance directly to a water tap or a water heater.

Please do not bend inlet pipes and drain-pipes when placing, and shall carefully connect water pipes.

Do not use any old and used water pipes.

You should prepare a tap with “3/4 inch” screwed joints for water supply system.

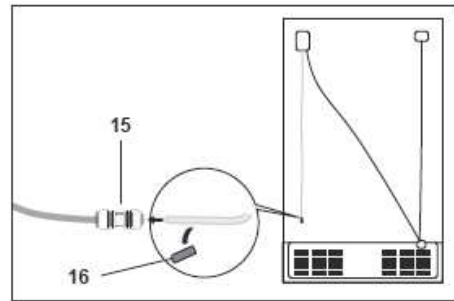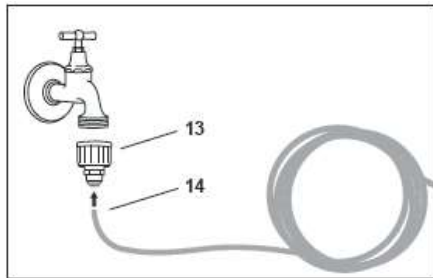

1. Push the terminal 14 of blue flexible hose of adapter into the 3/4 inch screwed joint 13.
2. Fasten the 3/4 inch screwed joint 13 to the tap.
3. Pull out the nut 16 from white flexible hose of the equipment.
4. Push the terminal of white flexible hose of the equipment into the hose connector 15.
5. If necessary, please rivet the flexible hose onto wall to avoid stumbling.
6. Carefully unscrew the tap to check whether the pipeline is sealed.

Usage Information




Instructions of ice-making machine

- Sounds will be produced during making ice cubes and crushed ice: Water valve will produce buzzing sounds; water flowing into ice vessel will produce sounds; grinding machine's grinding ice into small pieces or ice cubes falling into the container will produce sounds. The sounds are normal.
- Scratching noises may be produced when taking out the ice cubes. Nothing to worry about this.
- The ice in the container may be stuck together. In such cases, please take out the ice container and separate stuck ice into pieces by means of, for instance, using plastic or wooden spoons to push hard on the ice carefully. Other possibilities are illustrated in the chapter "ice container cleaning". If you need a lot of ice at once, please take ice directly from the ice container directly rather than constantly using the ice dispenser. This will avoid over heating the ice maker motor and will improve the life span of the unit. The chapter "ice container cleaning" explains how to remove ice container from freezer compartment.
- If the ice in the container is below a certain level e.g. if you have very recently taken a lot of ice, then the ice maker will stop until the ice reaches the correct level again.

Please wait for a while until new ice is made.


To prevent ice smell or bad taste of the ice, please clean the ice container regularly.


- Ice and water can only be dispensed when the door of freezer compartment is closed. In the process of fetching water and ice, if you open the freezer door, that process will automatically end.

When it displays ,  or  goes out, you click the buttons of **water dispenser** again.

Dispensing water


Dispensing cold water

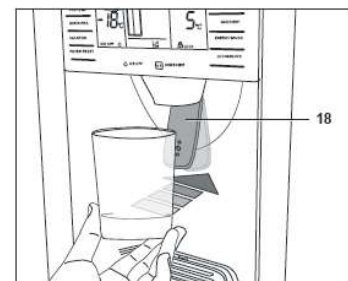


1. Keep pressing the buttons of Water Dispenser until the indicator  turns on.
2. Press the container in the direction of dispenser lever 18.
Cold water starts to flow into the container.
3. Remove the container from water dispenser lever and the water will stop dispensing.


Usage Information


Dispensing crushed ice

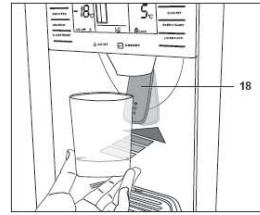

1. Keep pressing the buttons of Water Dispenser until the icon  lights up.
2. Press your container close to the dispenser to avoid spillage.
3. Press the container in the direction of dispenser lever 18. Fill the container with crushed ice.
4. Remove the container from dispenser lever 18 and ice will stop.


Dispensing ice cubes

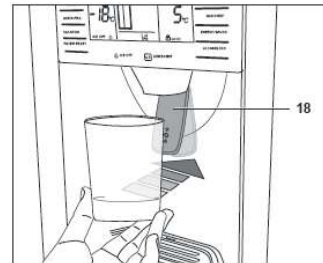


1. Keep pressing the buttons of Water Dispenser until the icon  lights up.
2. Place your container up to the dispenser lever 18. Ice cubes start to fall into the container.
3. Remove the container from dispenser lever 18 and the ice will stop.

Lock the ice-making machine

If the ice and water dispenser is not used for long periods you can lock out this function as follows:

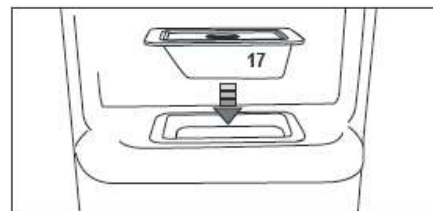


1. Press the Ice Off button. The display  lights up.
2. Block the dispenser chute with item number 17 to save energy.
3. If you wish to re-enable the ice maker, remove item 17, close the door and press the "Ice Off" button.

Usage Information


Shelving and rack adjustment

Important note: all food and drink should be removed from all shelves and racks before adjusting or removing them

You can adjust the shelving in the fridge compartment to your required configuration. To remove a shelf, lift it up slightly so the plastic stabilisers that are on either side of the shelf are above the shelf rails and then pull it towards you.

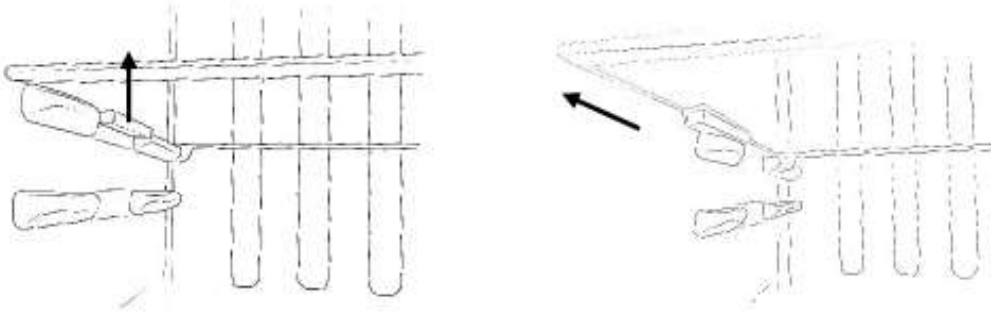





You can adjust the racks in the fridge and freezer compartments to your required configuration. To remove a rack hold both sides of the rack, lift it upwards (1) and then pull it towards you (2).

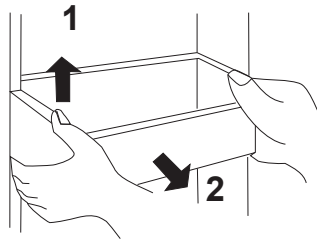

Bulb Replacement

The fridge and freezer lights are energy efficient, long life LEDs. Therefore, they should not need replacing throughout the life of the product.

The bulb is a direct current 12V LED module and in the unlikely event it does fail then it will need to be replaced by a qualified engineer.

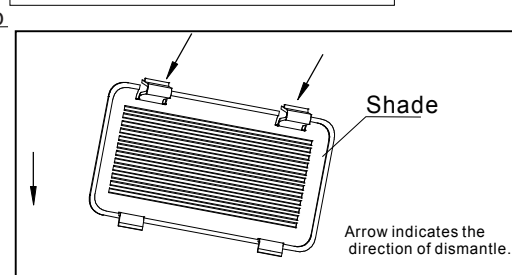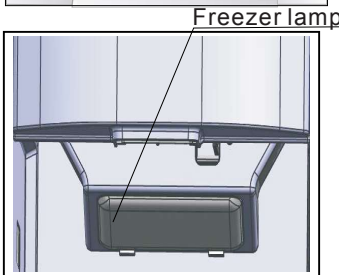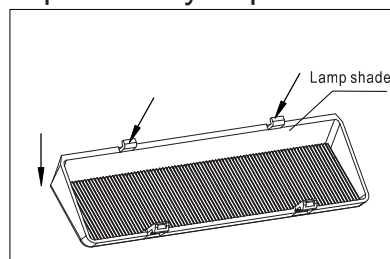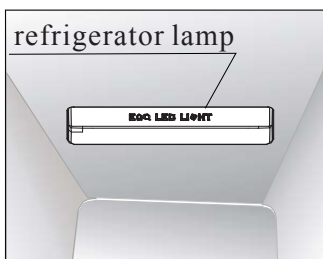

Reversing the Door

The doors cannot be reversed.

Energy Saving Advice

- Do not install the appliance close to sources of heat, such as a cooker, dishwasher or radiator.
- Locate the appliance in a cool well-ventilated room and make sure that the air vents are clear.
- Try to avoid keeping the doors open for a long time, as warm air will enter the cabinet and may cause a build-up of ice as well as affecting the energy consumption. Ensure there are no obstructions preventing the doors from closing properly.
- Ensure that the door seals are clean and there are no tears or splits.
- Keep the most perishable foods, (those with a short shelf-life, such as cooked meats), in the coldest part of the fridge. The Salad Crisper Box is the warmest part of your fridge and should be used for vegetables, salads and fruits etc.
- Do not overload the appliance: the cooling air that circulates and keeps the appliance cold gets blocked, and pockets of warm air form.
- Do not put hot food into the fridge or freezer –let it cool down first.

Freezer Storage Advice

- Store fresh food in airtight boxes or wrap in bags or foil which are suitable for freezing.
- Do not allow frozen food to come in to direct contact with food to be frozen.
- Pre-frozen food must be placed in the freezer as quickly as possible after purchasing.
- To prevent frost damage to fresh vegetables or fruits they must be processed appropriately before being placed into the freezer compartment.
- You must always follow the storage guidelines printed on all food packaging. However, below is some suggested maximum storage times at -18°C (4 star freezer rating) for a variety of foods:
 - Fresh meat & poultry –up to 12 months
 - Cooked meat –up to 2 months
 - Fresh fish –up to 6 months
 - Fruit & vegetables –up to 12 months
 - Bread & cakes –up to 6 months

Power Failure

If there is a power failure during the storage of frozen foods, keep the door closed. If the temperature within your freezer should rise, do not refreeze the food without checking it's condition.

- Ice Cream: Once thawed should be discarded.
- Fruit and Vegetables: If soft should be cooked and used up.
- Bread and Cakes: Can be refrozen without danger.
- Shellfish: Should be refrigerated and used up quickly.
- Cooked Dishes: i.e. casseroles should be refrigerated and used up.
- Large Pieces of Meat: Should be refrigerated and used up quickly
- Small Joints: Should be refrigerated and used up quickly
- Chicken: Should be refrigerated and used up quickly

Maintenance & Cleaning

Disconnect the appliance from the power supply before cleaning.

Internal Cleaning

- Do not pour water over the appliance.
- The cavity should be cleaned periodically using a solution of bicarbonate of soda and lukewarm water (5ml to 0.5 litre of water)
- Clean the accessories separately with soap and water. Do not put them in the dishwasher.
- Do not use abrasive products, detergents or soaps.
- After washing, rinse with clean water and dry carefully.
- When you have finished cleaning reconnect the plug with dry hands.

External Cleaning

- Wash the outer cabinet with warm soapy water. Do NOT use abrasive products.
- There are sharp edges on the underside of the product so care should be taken when cleaning.
- Once or twice a year dust the rear of the appliance and the compressor at the back of the appliance, with a brush or vacuum cleaner, as an accumulation of dust will affect the performance of the appliance and cause increased energy consumption.

When the appliance is not in use

When the appliance is not in use for long periods, disconnect from the electricity supply, empty all of the food and clean the inside. Leave the door open to prevent the build-up of odours.

Defrosting

Note: Care must be taken when performing the following procedure.

- The appliance is frost free, so there shouldn't be any requirement to defrost the freezer. However, in the unlikely event the appliance does need defrosting please follow the below steps:
- Try to use as much as possible of the food in the freezer, before defrosting. However, any food that is left, wrap in newspaper and place aside until ready to place back after cleaning.
- Switch the appliance off at the wall socket and remove the plug.
- Open the freezer door.
- Place a suitable container to collect the water created from the defrosted ice.
- After defrosting, clean and dry the interior.
- Switch the appliance on and replace any frozen food.

Defrosting can be accelerated by putting bowls of hot (not boiling) water in the freezer and loosening the frost with a suitable plastic scraper.

**⚠ Never use sharp metal tools as it may damage the appliance.
Never use an electrical heater, this may cause an electric shock.**

Trouble shooting

| Problem | Solution |
|---------------------------------------------------------|--------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| The fridge/freezer does not work | Check that the appliance is switched on. |
| | Check that there has not been a power cut. |
| | Check that the plug is not faulty. |
| | Check that the fuse has not blown. |
| | Check that the voltage is correct for the appliance. |
| | Are there any faults with the socket? For this purpose, try the plug of your appliance by connecting it to a socket which you are sure is working. |
| The temperature inside the appliance is not cold enough | Check that there is not too much food in the appliance. |
| | Check that the temperature is set to a suitable temperature. |
| | Check that the appliance is not placed in direct sunlight, or too near to a heating source. |
| | Check that the ambient temperature is within the operation limits of the appliance. |
| | Are the doors of the appliance opened frequently? Once the door is opened, the humidity found in the air in the room enters the appliance, especially if the humidity levels in the room are very high. The more frequently the door is opened in humid conditions the more chance of the build up of moisture. |
| The temperature within the appliance is too cold | Increase the working temperature by adjusting the temperature to a higher level. |
| | The lowest setting/temperature should only be used as a rapid cool setting and should only be set 2 hours before a large amount of food is placed in the fridge. If this is not done the temperature in the fridge compartment could fall below 0°C as the compressor will run continuously. |
| The inner surfaces of the appliance are wet | Caused by condensation-dry the inside of the appliance. |
| The outer surfaces of the appliance are wet | Caused by condensation-dry the outer of the appliance carefully. |
| Smell/odour | Check all the food and drink that is in the fridge is in date and correctly packaged. If it is not then it should be removed immediately or repackaged. |
| | Check for spillages on each shelf, rack and drawer. You may need to remove the drawers to check that no spillages have settled underneath them. As spillages that have not been cleaned and have been left can cause smells and unwanted odours. Check the drainage pipe is not clogged or the drip tray at the back of the appliance is full. The pipe can be cleared by pouring hot water through, but you must ensure the appliance is turned off, the plug is removed from the socket and a jug or bucket is in place to catch the flow of water. |

Trouble shooting

| Problem | Solution |
|---------------------------------|----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| The doors do not close properly | Ensure there are no obstructions preventing door closure. |
| | Check the door compartments and shelves are correctly in place. |
| | Check the door seal is not warped or torn. |
| | Check the appliance is level. |
| Unusual noises | Check that the appliance is on a flat, level surface and is stable. |
| | Check the spacing's around the appliance and ensure it is not touching other items. |
| | Bubbling and gurgling sound: This noise is emitted as the coolant fluid flows through the pipes within the system. This is normal. |
| | Water flowing sound: This is the normal sound of water flowing into the drain trough during the defrosting process. |
| | If the appliance is operating noisily (compressor noise): This is normal. This noise indicates that the compressor is operating normally. As the compressor is being energized, it might run a bit more noisily for a short period of time. |

BELLING CUSTOMER CARE

In case of difficulty within the Republic of Ireland, please call Belling Customer Care Centre Helpline on:

Phone 01 8428222

Fax 01 8428091

When you dial this number you will hear a recorded message and be given a number of options.

This indicates that your call has been accepted and is being held in a queue. Calls are answered in strict rotation as our Customer Care Representatives become available.

Enter appliance numbers here for future reference:

| | | | | | | | |
|-----------|--|--|--|--|--|--|--|
| Model No | | | | | | | |
| | | | | | | | |
| Serial No | | | | | | | |
| | | | | | | | |

Please ensure you have the above details (Model No and Serial No) to hand when calling Belling Customer Care. They are essential to booking your call.

Service email: serviceireland@glendimplex.com

Spares email: sparesireland@glendimplex.com

Website for consumables: www.glendimplexireland.com

Hours of business: 9am - 1pm & 2pm - 5pm Monday - Friday

